



**KAFFIT**®  
**COM**

**USER MANUAL**

**ENG**

**Coffee machine KAFFIT.COM K95L**

<b>Contents</b>	
<b>The appliance and its parts</b>	<b>3</b>
<b>Controls and display</b>	<b>4</b>
<b>Introduction</b>	<b>5</b>
Safety instructions	5
Precautions	6
Prohibitions	6
<b>Intended use</b>	<b>7</b>
Symbol description	7
<b>Instruction for first-time use</b>	<b>7</b>
Electrical connection	7
Filling the water tank	7
Filling the coffee bean hopper	8
Grinder adjustment lever for setting the level of grinding	8
Power on	8
Power off	12
<b>Making beverages</b>	<b>12</b>
Making beverages by pressing the touch button-indicator	13
Making cappuccino	13
Preparing a serving of hot milk	14
<b>Permanent settings in programming mode</b>	<b>14</b>
Permanent settings in programming mode	14
Settings in the programming mode	15
<b>Shortcut function</b>	<b>17</b>
Shortcut function. "RINSING" touch icon	17
Shortcut function. "RINSE MILK UNIT" touch icon	18
Shortcut function. "STATISTICS" touch icon	19
Shortcut function. "SCREEN LOCK" touch icon	19
<b>Machine settings</b>	<b>20</b>
BEVERAGE SETTINGS	20
WATER SETTINGS	26
Water hardness settings	26
Manual and Automatic rinsing	28
Using a water filter	29
Language settings	30
Emptying water system (Emptying the System for Transportation)	30
AUTOMATIC SWITCH ON/OFF	31
Programming ON/OFF time settings	32
Operating time settings	33

RESET (to factory settings)	34
Selection of water supply mode	35
Volume adjustment setting	36
Factory reset settings	37
Factory reset. ALL BEVERAGES item	38
Machine settings. Return to the factory settings	39
<b>Statistics</b>	<b>40</b>
<b>Advertising settings</b>	<b>42</b>
Welcome Ads	44
ADs while making a beverage	45
ADs after the beverage preparation	46
<b>Security&amp;Privacy</b>	<b>48</b>
<b>Individualization</b>	<b>49</b>
Confirming the cup in position	50
Beverage adjustment	51
Protection against accidental pressing	52
<b>ABOUT EQUIPMENT</b>	<b>53</b>
<b>Water connection</b>	<b>54</b>
Water connection group	54
Step 1. Technical connection to the water supply	54
Step 2. Service settings for connecting to the water supply	55
Disposal of coffee waste	56
Waste water discharge	56
<b>Maintenance</b>	<b>56</b>
Cleaning brewing unit with a tablet	57
Cleaning the milk unit	59
Descaling the coffee machine	60
Cleaning coffee grounds container and drip tray	63
Cleaning water tank	64
Cleaning the bean hopper	64
Disassembling and cleaning the Auto Cappuccino system	64
Cleaning the milk pipe	65
Daily care	65
<b>Additional functionality: payment system</b>	<b>65</b>
<b>Trouble-shooting</b>	<b>66</b>
<b>Display messages</b>	<b>67</b>
<b>Transportation and recycling</b>	<b>68</b>
Recycling.	68
<b>Technical Data</b>	<b>68</b>

## The appliance and its parts

### Model K96L



1. Bean container lid
2. Water tank lid
3. Water tank
4. Drip tray lid
5. Coffee ground container
6. Drop tray
7. Bean hopper
8. Grinder adjustment lever
9. Grind lever lid
10. Hot water spout
11. Coffee spout - 2 pcs.
12. Milk cream spout - 2 pcs.
13. Power switch
14. Power cord

## Controls and display

### Model K95L



1. Setting touch icon
2. Beverage touch icons
3. ON/OFF button
4. Shortcut menu touch buttons

## Introduction

**Thank you for choosing the K95L fully automatic coffee machine.**

The coffee machine must only be used to prepare coffee and coffee drinks with milk. We are not responsible for the consequences of any misuse of the coffee machine. Please read the contents of the instruction manual carefully.

**Please keep this manual for future reference at any time. Before using the coffee machine, read this user manual carefully and familiarize yourself with the technical data on page 68.**

Damage caused by failure to follow the instruction manual is not covered by the warranty. Keep this instruction manual for the coffee machine.



## Safety instruction

**Please read and carefully follow the following important safety instructions.**

- Your coffee machine can be connected to the water line. Act in accordance with this instruction to connect the water supply correctly.
  - maximum inlet water pressure is 5 bar
  - minimum inlet water pressure is 1 bar

Watch your water supply! If the water is turned off and the pump is idle for some time, it will break. **THIS IS NOT COVERED UNDER WARRANTY!**

- When connecting, place the coffee machine on a flat horizontal surface. When preparing beverages, please do not touch the coffee spout to avoid burns.
- Please do not allow the power cord, socket and the device itself to come into contact with water. Never operate a coffee machine with a defect or a damaged power cord. If the power cord is damaged, it must be replaced immediately by an appropriately qualified person in order to avoid a hazard.



- Make sure that the coffee machine and power cord are not near hot surfaces, and that the cord is not pinched or rubbed against sharp edges.
- Never leave the power cord hanging down, you may trip over it.
- For extended absences, switch off the coffee machine and unplug the power cord from the socket.
- Always turn off the coffee machine before cleaning.
- This coffee machine is intended for use by staff and users with special skills in different companies for commercial and representatives.

## Precautions

In the event of malfunctions of the coffee machine, first try to solve them yourself using this user manual (page 66 section "Troubleshooting"). Never disassemble or repair the coffee machine yourself.



If this proves ineffective, please contact the KAFFIT.com hotline for more information. If repair is necessary, contact the service center.

You can find the hotline number of KAFFIT.com, as well as the contacts of service centers on the website [www.kaffit.com](http://www.kaffit.com), or in the warranty certificate.

Any repairs must be carried out exclusively by a service center using original spare parts.

## Prohibitions

- Connect the coffee machine only to the voltage network specified on the coffee machine sticker. Additional technical data can be found on page 66 in the "Technical parameters" section.
- Do not connect the coffee machine directly to the water supply. Unfiltered water can damage the coffee machine. This is not covered under warranty!
- Always wipe the coffee machine with a damp, but not wet, cloth.
- Do not allow water to enter the bean hopper.
- Do not use processed coffee (for example: coffee roasted with sugar or flavored oils)
  - Only roasted coffee bean is allowed to put into the bean container. Chocolate bean, nut, sugar, spice, etc., are prohibited. Otherwise it would cause coffee machine damage.
  - Never use coffee machine in the environment temperature below 0 °C. Water inside the machine will freeze and cause the coffee machine damage.
- Never expose the coffee machine to rain, snow or direct sunlight. Do not allow the coffee machine to overheat. Make sure that the ventilation openings are not blocked.
- Always fill the water tank with fresh cold water. If milk, carbonated water or mineral water enters the water tank, the coffee machine will break down.



Damages due to above reasons are not covered under warranty.

## Intended use

The coffee machine must only be used to prepare coffee and coffee drinks with milk. We are not responsible for the consequences of any misuse of the coffee machine. Please read the contents of the manual carefully.

**Please keep this manual for future reference at any time.**

## Symbol description



Caution! Non-compliance with the operation, may cause electric shock, and threat to life.



Caution! Non-compliance with the operation may cause Coffee machine damage, or personal injury.



Burn hazard! Non-compliance with the operation, may cause scalded or burn injury.



Caution! This symbol is prompted on important sections. Please carefully read them.



This symbol, if prompted, represents recycling.

Do not put ground coffee or coffee beans into the oil cleaner compartment. This will damage the coffee machine.

## Instructions for first-time use

### Electrical connection

- Place the coffee machine on a level, stable surface away from sources of heat and moisture.
- Before connecting, make sure that the mains voltage matches the technical parameters of the coffee machine (page 68 section "Technical parameters").
- Do not leave the power cord hanging down. You may trip over it.




### Filling the water tank

- Only clean fresh water can be filled into the water tank. Never use any other liquid (milk, mineral water). This will damage the coffee machine.
- To make guaranteed quality drinks, change the water in the hopper every day.
- The amount of water in the hopper must not exceed the MAX mark.





## Filling the coffee bean hopper

- Never put green (unroasted) coffee beans, coffee flavored with oils or roasted with added sugar into the hopper.
- Only roasted coffee beans may be placed in the hopper. Never fill the hopper with rice, soybeans, chocolate, nuts, sugar and spices.
- Never place foreign objects in order to avoid damage to the coffee grinder.
- Do not pour liquids into the bean hopper.

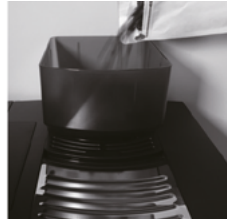

## Grinder adjustment lever for setting the level of grinding

- The level of grinding can be continuously adjusted depending on the degree of roasting of the coffee beans used.
- Please adjust the grinding level with the grinder adjustment lever only when the coffee grinder is in operation, in order to avoid damage to the grinder.
- The adjustment of grinding wheel will be effective only after making two or more cups of coffee.
- It is recommended to set a coarser grind for dark roast beans and a finer grind for light roast beans.
- When the grinding level is set correctly, coffee is dispensed evenly from the coffee spout.

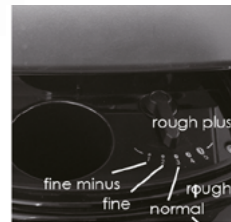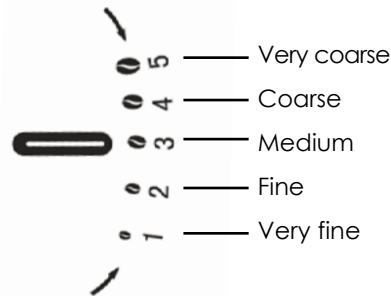


## Power on


1. Connect the power cord to the coffee machine
2. Insert the power plug into the socket.
3. Connect the coffee machine to the mains using the power switch on the rear panel.
4. Pour water into the water tank and pour beans into the coffee bean hopper.



Press the ON/OFF button to activate the appliance.

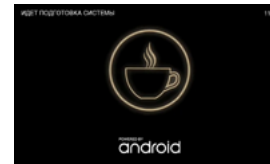


Display message: "WELCOME". Next, you will be asked to go through several steps to set up the coffee machine's operating modes.

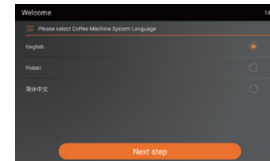


Display message: "SELECT LANGUAGE". The display shows the languages that can be selected. Click the icon of the desired language, for example "English". To move to the next item, touch the NEXT STEP icon.



Message on the display: "SELECT THE WATER SUPPLY MODE". In this menu item, you can choose whether your coffee machine will take water from the water tank or will be connected to the tap water supply. Initially, the coffee machine is set to use water from the tank. Therefore, before connecting to the tap water supply, perform the first switch-on. To move to the next item, touch the NEXT STEP icon.

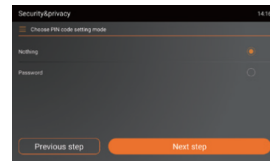


Display message: "SECURITY&PRIVACY". In this item you can set and activate a password to enter the SETTINGS menu. Display message: "CHOOSE PIN CODE SETTING MODE". When activating the MODE WITH PASSWORD, a window will open – request for input 6 characters to create a password and a prompt for password confirmation by re-entering. Press OK to activate the password mode. To move to the next item, touch the NEXT STEP icon.

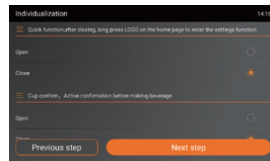


Display message: "INDIVIDUALIZATION". At this point, you can:

- Select conditions for entering the SETTINGS menu
- Activate cup setting confirmation before cooking
- Enable access to change the recipe during the preparation process
- Activate the protection mode against accidental ON / OFF.

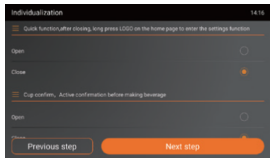

Display message: "PRESS AND HOLD SETTINGS TO ENTER MENU".  
 Select OPEN to quickly enter the menu, or activate the CLOSE mode to enter the menu by pressing and holding the SETTINGS button.

Display message: "CUP CONFIRM".  
 Select OPEN to enable confirmation mode, or CLOSE to disable it. To go to the next menu sub-item, use the scroll mode (swipe up from the bottom of the coffee machine display).  
 Message on the display: "CHANGING THE BEVERAGE RECIPE DURING PREPARATION".  
 Select OFF to block recipe changes during cooking, or ON to allow changes.  
 To go to the next menu sub-item, use the scroll mode (swipe up from the bottom of the coffee machine display).  
 Display message: "ACTIVATION ON/OFF. HOLD FOR 3 SEC." To activate the protection mode against accidental ON / OFF. activate the ENABLE icon. To move to the next step, touch the NEXT STEP icon .

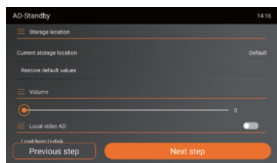


The message on the display: "AD STANDBY". At this point, you can:

- Select a storage location for videos.
- Select the volume of the video playback sound.
- Activate downloaded videos.
- Download new videos from a USB drive.


Display message: "STORAGE LOCATION".  
 The current location of the videos is shown by default (device storage). To clear the storage space and reset all downloaded files, click on the SELECT SETTINGS sub-item RESTORE DEFAULT VALUES and OK to confirm the selection.

Display message: "VOLUME".  
 To unmute videos, swipe from left to right. The sound can be adjusted from 0% (off) to 100%.  
 To go to the next menu sub-item, use the scroll mode (swipe up from the bottom of the coffee machine display).


Display message: "LOCAL VIDEO AD".  
 By default, at the factory - manufacturers have activated the playback of the downloaded promotional video. Its status is ON.  
 You can disable playback of the downloaded video. To do this, activate the OFF status.  
 To download your commercial from USB, activate the LOAD FROM U-DISK tab.  
 Insert a flash card or USB-storage device into the slots to the right of the display and activate the download. The coffee machine only supports and plays MP4 clips. The downloaded video will be automatically saved to the machine's memory.

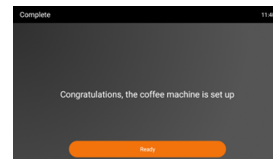


Display message: "COMPLETE. CONGRATULATIONS, THE COFFEE MACHINE IS SET UP."

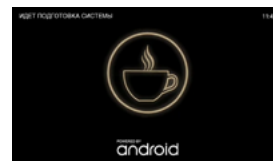

Display message: "SYSTEM PREPARATION IN PROGRESS. HEATING".

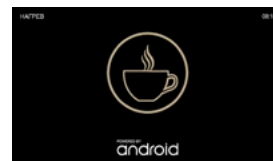

Display message: "HEATING".

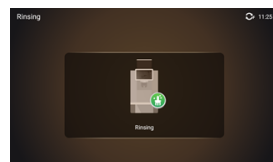

Display message: "RINSING".  
 A small amount of water is drained into the waste water collection tray. Next, a request appears to rinse the Auto Cappuccino system.



Display message: "REMOVE MILK PIPE FROM THE MILK TANK AND INSERT IT INTO THE DRIP TRAY". Connect the milk tube to the cappuccinatore (through the adapter installed in the tube), and insert the free end of the tube into the round hole on the drip tray. Display message: "RINSING". The Auto-Cappuccino system and the coffee spout are being rinsed.



When the rinsing process is completed, the coffee machine enters the beverage preparation mode.

Each time you turn on the coffee machine, it automatically warms up, rinses and goes into standby mode.

During rinsing, a small amount of hot water flows through the coffee spout. Please avoid contact with hot water.



The coffee machine has been tested at the factory, there may be a small amount of coffee left in it.

We guarantee you that the coffee machine has never been used.

## Power off

Press and hold the ON/OFF button to turn off the coffee machine. When you turn off the coffee machine, a rinsing cycle starts automatically.

- During rinsing, a small amount of hot water is supplied through coffee spout
- Please avoid contact with hot water.



### Condition:

If you have prepared beverages with milk, the cappuccino rinsing function will become available when you turn off the coffee machine.

Press and hold the ON/OFF button for 2 seconds. Message on the display: "REMOVE THE MILK PIPE FROM THE MILK TANK AND INSERT IT INTO THE TRAY".

- Remove the pipe from the milk carton, disconnect from the thermos container and insert into the round hole of the drip tray.

Press "OK" to start the flushing process. The Auto-Cappuccino system and the coffee spout are being rinsed. At the end of the process, the coffee machine turns off.

## Making beverages

Please read the following instructions carefully to ensure that your beverages are of the highest quality.

The beverage supply temperature is very high. Please, be careful!

- Coffee beans should be stored in a dry place out of direct sunlight.
- Only fill the water tank with fresh cold water.
- For perfect quality beverages, change the water in the tank daily.
- Please preheat the cup before making coffee for the best taste.
- Please adjust the height of the coffee spout to the height of the cup to avoid splashing.
- The coffee spout height adjustment range is 100-165mm.



## Making beverages by pressing the touch button-indicator

Please warm up the cup before preparing your drink.

The recommended volume for preparing Espresso is 30-50 ml.

The recommended volume for making Americano is 150-200 ml

You can prepare 20 types of coffee drinks by pressing the corresponding touch icon.

For example, consider the process of making espresso.


To start the espresso preparation process, press the ESPRESSO touch icon.



By using the navigation buttons during grinding you can select the desired strength. The default setting for strength is -



Using the navigation icons, at the time of dispensing water, you can select the desired volume. Espresso is set to 45 ml by default.

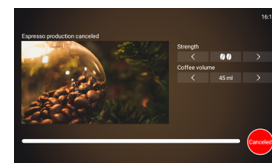


The process of dispensing a beverage can be stopped by pressing the touch button - the CANCEL indicator.

Once a drink has been prepared, the settings will not be saved. At the end of the process, the touch icons for preparing beverages will appear on the display.

## Making cappuccino



To prepare a cappuccino, connect the milk pipe to the cappuccino maker through the adapter. Dip the free end of the pipe into the milk carton and press the CAPPUCCINO touch icon.

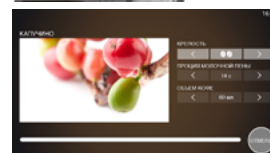

Using the navigation icons, at the time of preparation you can select the desired strength, amount of water and milk foam. Once a drink has been prepared, the settings will not be saved.






When the touch icons appear on the screen, your drink is ready - enjoy!


## Preparing a serving of hot milk



To prepare a portion of milk, connect the milk pipe to the cappuccinatore through the adapter. Dip the free end of the pipe into the milk bag and press the touch icon HOT MILK. The icon is located on the third page of the display. To go to the third page, swipe twice on the display from right to left.

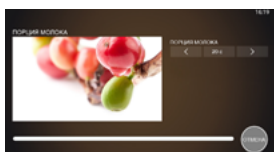

Using the navigation icons, at the time of preparation you can select the desired amount of milk. Once a drink has been prepared, the settings will not be saved.

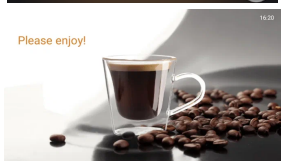


At the end of the process, the touch icons for preparing drinks will appear on the display.


## Permanent settings in programming mode

### Entering the programming menu

To enter the programming menu, do the following:

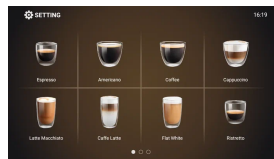

Press and hold the SETTINGS button for 2 seconds to enter the programming menu.


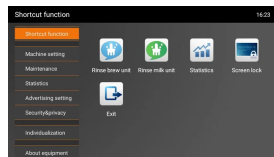






The SHORTCUT FUNCTION tab is highlighted. On the right, the quick menu touch icons are lit.



## Settings in the programming mode

With the KAFFIT.com coffee machine, you can easily make settings for preparing coffee beverages according to your individual taste preferences. Using the navigation buttons, you can view and execute the program steps and store the desired settings in memory.

With this coffee machine, you can make the following permanent settings.

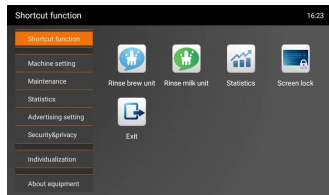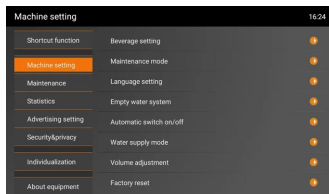Programm item	Description
<p><b>SHORTCUT FUNCTION</b></p> 	<p>In this menu, you can:</p> <ul style="list-style-type: none"> <li>- start rinsing the brewer (forced heating of the system before preparing a small portion of beverages) pg. 17</li> <li>- start rinsing the Auto-Cappuccino system pg. 18</li> <li>- view information about all prepared cups of beverages</li> <li>- lock the screen for 15 seconds to prevent accidental icon pressing</li> <li>- perform a quick exit from the programming menu</li> </ul>
<p><b>MACHINE SETTING</b></p> 	<p>This menu will allow you to:</p> <ul style="list-style-type: none"> <li>- select settings for preparing coffee and milk drinks.</li> <li>- block, add or remove a drink.</li> <li>- activate the "Strength +" function for preparing large volume coffee beverages and beverages with milk. pg 23</li> <li>- Adjust the water hardness. pg 26</li> <li>- Select the setting mode for rinsing when ON/OFF (automatically or manually). pg. 28</li> <li>- Customize the use of equipment with a water filter. pg. 29</li> <li>- Select language. pg. 30</li> <li>- Drain the system for transportation. pg. 30</li> <li>- Program the automatic ON/OFF time. pg.30</li> <li>- Switch from water tank operation to tap water supply. pg. 35</li> </ul>

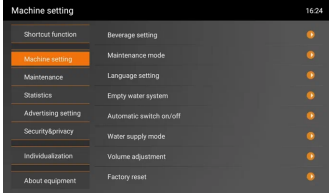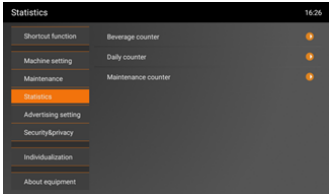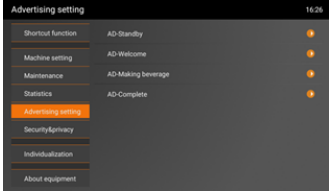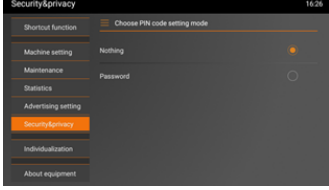Program item	Description
<p><b>MACHINE SETTINGS</b></p> 	<p>Adjust hot water and coffee dispensing volumes pg. 36</p> <p>Restore factory settings by drinks, by coffee machine pg. 37</p>
<p><b>MAINTENANCE</b></p> 	<p>In this menu item you can select and start the required maintenance program pg. 56</p>
<p><b>STATISTICS</b></p> 	<p>In this item you will be able to view information about all prepared servings of beverages, about the number of service programs performed, and also take readings of the daily counter (shift counter) pg. 40</p>
<p><b>ADVERTISING SETTINGS</b></p> 	<p>This menu item will allow you to configure the playback of advertising:</p> <ul style="list-style-type: none"> <li>- In standby</li> <li>- when you turn on the coffee machine</li> <li>- during the preparation of drinks</li> <li>- at the end of the preparation of the drink pg. 42</li> </ul>
<p><b>SECURITY&amp;PRIVACY</b></p> 	<p>This menu item allows you to set the coffee machine's operating mode with or without a password pg. 48</p>

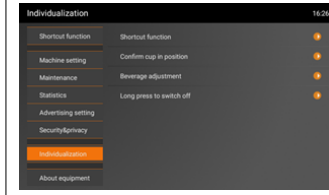Programm item	Description
<p><b>INDIVIDUALIZATION</b></p> 	<p>In this menu item you can:</p> <ul style="list-style-type: none"> <li>- activate instant access to the shortcut function. pg. 49</li> <li>- activate the prompt for confirming the installation of the cup.</li> <li>- enable / disable settings changes during beverage preparation.</li> <li>- activate protection against accidental ON/OFF. pg. 49</li> </ul>
<p><b>ABOUT EQUIPEMENT</b></p> 	<p>In this menu item you can select and start the required maintenance program. pg. 53</p>

## Shortcut function

In this menu item, you can force the rinsing of the brewer and the Auto-Cappuccino system, as well as view information about all drinks prepared during the day and enable temporary screen lock.

### Shortcut function. "RINSING" touch icon


Every day, when switched on and off, the automatic rinsing cycle of the coffee machine starts.

If more than 30 minutes have elapsed since the last drink was prepared, or if you want to prepare a drink with a small volume (e.g. ristretto), we recommend that you run a forced rinsing cycle before preparing it.




The coffee machine is ready to go. Beverage preparation touch icons are lit.

Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

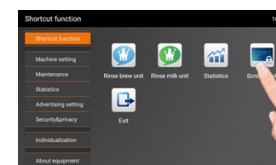

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit. To start rinsing, click on the RINSING icon.

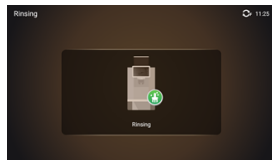

Display message: RINSING.  
The rinsing process must not be interrupted. A small amount of hot water is dispensed through the coffee spout. Be careful!



At the end of the process, the touch icons for preparing beverages will appear on the display.


### Shortcut function. "RINS MILK UNIT" touch icon



The coffee machine is ready to go. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.



The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit. To start rinsing, click on the RINS MILK UNIT icon.

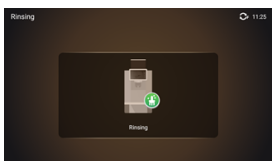

Display message: RINSING.  
The rinsing process must not be interrupted. A small amount of hot water is dispensed through the coffee spout. Be careful!



Display message: REMOVE THE MILK PIPE FROM THE MILK TANK AND INSERT IT INTO THE DRIP TRAY. Remove the milk pipe from the milk bag, disconnect it from the thermos container and insert it into the round hole in the drip tray. Click "OK".



Display message: RINSING.  
A small amount of hot water is dispensed through the cappuccinatore. Be careful!



At the end of the process, the touch icons for preparing beverages will appear on the display.

### Shortcut function. "STATISTICS" touch icon




The coffee machine is ready to go. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.



The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit. To quickly view the daily counter, the number of drinks prepared during the day, click on the STATISTICS icon.




The total number of drinks prepared is displayed in the upper right corner. For a detailed view of each beverage, swipe up from the bottom of the display. To exit the sub-menu, press BACK.

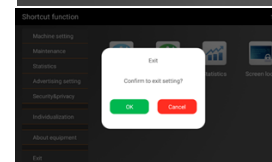


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

\* **NOTE:** The daily counter is reset at 00:00 min. If the current time is 08:00 and the coffee machine time is set to 21:00, then the daily counter will be reset in 3 hours.


### Shortcut function. "SCREEN LOCK" touch icon

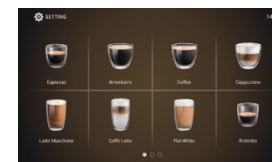


The coffee machine is ready to go. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

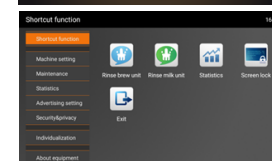

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit. To eliminate the possibility of accidentally starting a beverage, press the SCREEN LOCK icon.

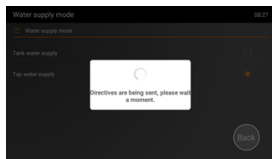

Display message: The screen will be unlocked in 15 seconds. The countdown starts. As soon as the countdown shows a value of 0 seconds, the screen will be unlocked.

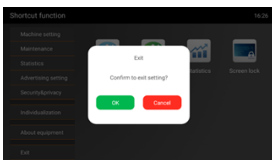


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Machine settings



The coffee machine is ready to go. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

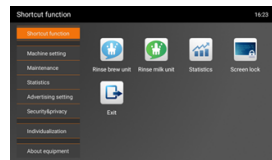

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

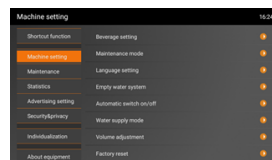

Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

## BEVERAGE SETTINGS

In this menu item, you can make individual preparation settings for any coffee beverage, create your own, as well as block or delete a beverage.

- We recommend setting a higher temperature for light roast beans or if you are using 100% Arabica.
- We recommend setting a lower temperature for beverages made from heavily roasted beans or if the coffee blend has a high Robusta content.




See the table below for details on the setting options.

Beverage	Strength	Settings
ESPRESSO		<b>BEVERAGE RECIPE:</b> -Coffee -Coffee +Hot water -Hot water - Hot milk + Coffee - Hot milk + Milk cream + Coffee (at the same time) - Hot milk + Milk cream + Coffee (in sequence) - Hot milk - Milk cream Coffee volume: 15-300 ml Coffee temperature: 15 options Pre-brew option: YES/NO Block/Delete Strength+
AMERICANO		
COFFEE		
CAPPUCCINO		
LATTE MACCHIATO		
LATTE		
FLAT WHITE		
RISTRETTO		
MACCHIATO		
COFFEE CREM		
2 ESPRESSO		
2 AMERICANO		
2 COFFEE		
2 CAPPUCCINO		
2 LATTE MACCHIATO		
2 LATTE		
2 FLAT WHITE		
2 RISTRETTO		
2 MACCHIATO		
2 COFFEE CREAM		
COFFEE POT		
HOT WATER		Hot water: 25-300 ml Water temperature: 15 options Block/Delete
HOT MILK		Hot milk (sec.): 5-120 seconds Block/Delete
MILK CREAM		Milk cream (sec.): 5-120 seconds Block/Delete


Permanent settings in programming mode are always made as shown below.

Example: changing the recipe for preparing an Espresso beverage according to your taste preferences.


To enter programming mode, do the following:

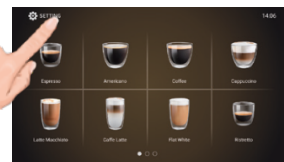


The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

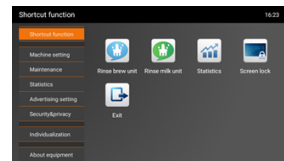


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

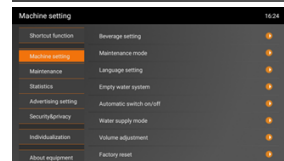


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

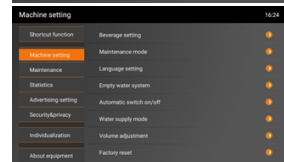


Choose the BEVERAGE SETTINGS tab.

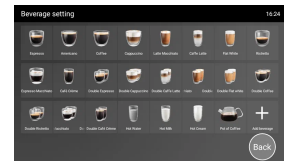

Touch the ESPRESSO icon.

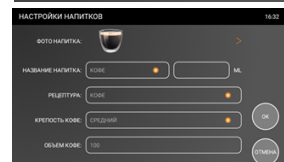


The BEVERAGE SETTINGS window will open.

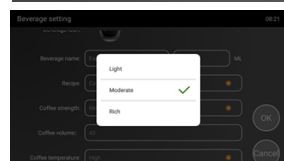


Press the COFFEE STRENGTH tab. Choose the needed strength and touch the tab (LIGHT / MODERATE / RICH).




Press the COFFEE VOLUME tab. to activate it. Fill in the value you need and confirm your choice by touching the symbol - (▶)

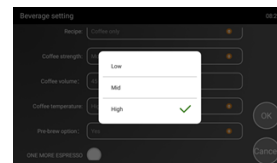



Press the COFFEE TEMPERATURE tab. Check the box next to the value you need (LOW/MID/HIGH).

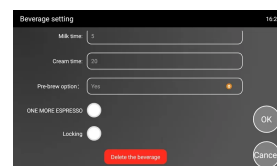

By pressing on the field, activate the PRE-BREW OPTION tab (pre-wetting) and check the box next to the value you need. **Note:** For smaller drinks (espresso, ristretto), select YES for a richer taste and aroma.

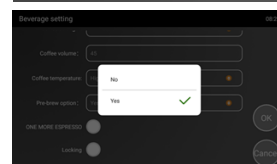

You can also block or delete a beverage. When the beverage is locked, the "LOCK" symbol will appear next to it, and when you press the touch button of the beverage, the message will appear: BEVERAGES ARE LOCKED, PLEASE CONTACT THE OPERATOR. Press "OK" to save the drink recipe. To exit the beverage setting, press "BACK".

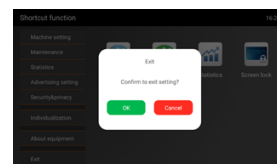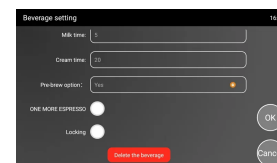


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

**Example:** creating a new recipe. Activation of the STRENGTH+ function.



The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

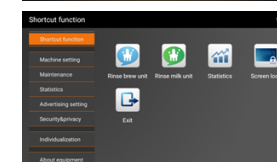


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.



Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.




Choose the BEVERAGE SETTINGS tab.

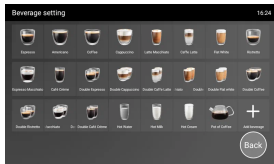


Touch the ADD BEVERAGE icon.




By pressing on the + field, activate the BEVERAGE ICON tab. Choose the photo you need.

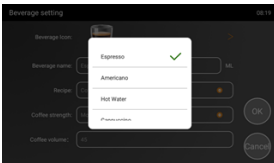

By pressing on the field, activate the BEVERAGE NAME tab. Check the box next to the value you want. If this name of the beverage is already in the list of recipes, then for a new beverage you need to fill in the ML field. Enter the value you need in the field, for example 300 ml. Press to move to the next field. Press to confirm the selected volume.

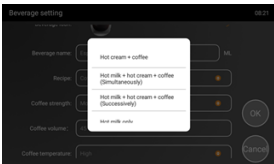


By pressing on the field, activate the RECIPE tab. Select the formula MILK CREAM + COFFEE.

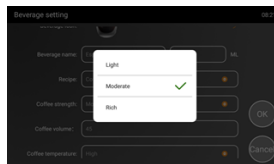


Press the COFFEE STRENGTH tab. Choose the needed strength and touch the tab (LIGHT / MODERATE / RICH).




Press the COFFEE VOLUME tab to activate it. Fill in the value you need and confirm your choice by touching the symbol ->

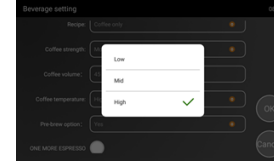


Press on the field to activate the COFFEE TEMPERATURE tab. Check the box next to the value you need (LOW / MEDIUM / HIGH).

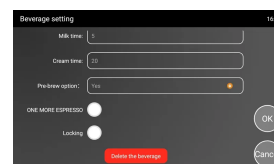

By pressing on the field, activate the tab CREAM TIME SEC. Enter the desired value and confirm your choice by pressing the symbol ->

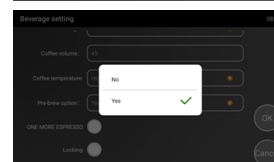


By pressing on the field, activate the PRE-BREW OPTION tab. (pre-wetting) and check the box next to the value you need. **Note:** For smaller drinks (espresso, ristretto), select YES for a richer taste and aroma.

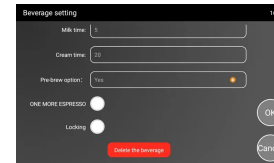

When programming high volume coffee beverages and beverages with milk, you can further increase the strength by activating the PRE-BREW OPTION.

By pressing on the field, activate the PRE-BREW OPTION tab. Press "OK" to save the settings. To exit the menu, press "BACK".

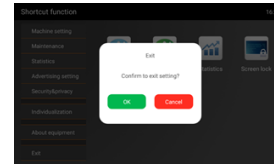

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


**Note:** When PRE-BREW OPTION is activated, the Espresso+ icon will appear next to the beverage icon. During the preparation of the drink, coffee is dispensed two times.

For example, when preparing a cappuccino, a portion of milk cream is dispensed, followed by an espresso. Next, the coffee waste is dumped and the preparation of the second portion of espresso begins.


## WATER SETTINGS




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

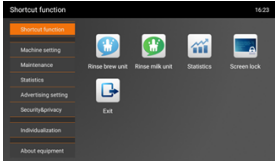

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

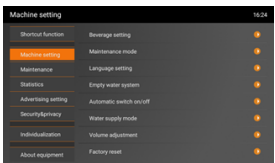

Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

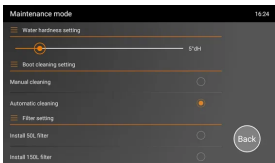

Press the WATER SUPPLY MODE tab. A window with tabs will open:  
 - WATER HARDNESS SETTINGS  
 - BOOT CLEANING SETTINGS (enables automatic rinsing when turning the coffee machine ON)  
 - FILTER SETTINGS

### Water hardness settings


For the correct operation of the coffee machine and in order to avoid breakdowns, it is necessary to program the degree of hardness of the water used.

- 1-4°dh Cleaning prompt will appear after 5000 cups have been prepared (not covered by warranty)
- 5-9°dh Cleaning prompt will appear after 1000 cups have been prepared (factory default setting)
- 10-14°dh Cleaning prompt will appear after 800 cups have been prepared
- 15-19°dh Cleaning prompt will appear after 500 cups have been prepared
- 20-24°dh Cleaning prompt will appear after 300 cups have been prepared
- 25-30°dh Cleaning prompt will appear after 100 cups have been prepared


The coffee machine is defaultly set to use very soft water. If you are using bottled water, you will need to set the range to 10-14°dh. When using tap water, set 20-24°dh.




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

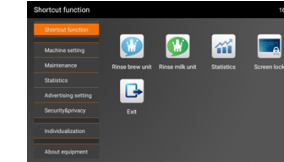


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

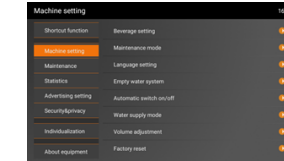


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted. Enter the MAINTENANCE MODE tab.

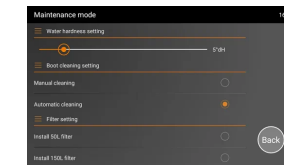

Move the icon from left to right on the hardness scale to the value you need.

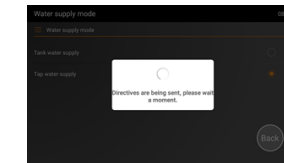

Display message: DIRECTIVES ARE BEING SENT, PLEASE WAIT A MOMENT. Settings have been saved. To exit the sub-menu, press BACK.

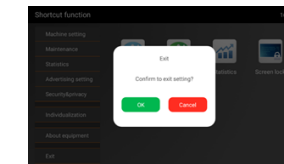


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Manual or Automatic rinsing


In this menu item, you can set an automatic or manual rinsing cycle when the coffee machine is switched on.




The coffee machine is ready. Beverage preparation touch icons are lit.  
Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

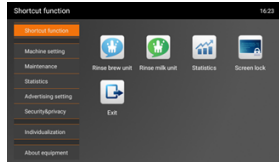


The SHORTCUT FUNCTION tab is highlighted.  
On the right, the shortcut function touch icons are lit.

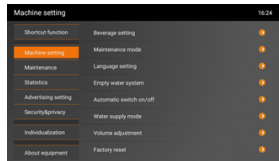


Select the MACHINE SETTINGS tab and activate it.  
The MACHINE SETTINGS tab is highlighted.

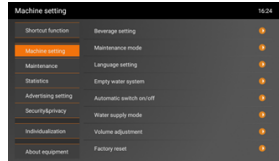


Enter the MAINTENANCE MODE tab.

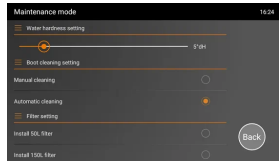

The "AUTOMATIC CLEANING" tab will have two options to choose from "MANUAL CLEANING" and "AUTOMATIC CLEANING".  
Choose the value you need.

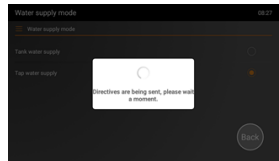

Display message: DIRECTIVES ARE BEING SENT, PLEASE WAIT A MOMENT.  
Settings have been saved.  
To exit the sub-menu, press BACK.

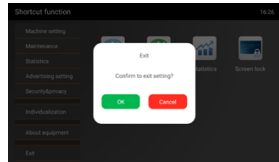


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Using a water filter

In this menu item, you can set the use of the coffee machine with or without a 50L/150L water filter. By default, the coffee machine comes with a setting without the use of a water filter.


**NOTE:** The water filter connector is an optional item and is not included in the scope of delivery.

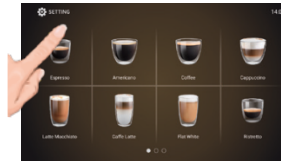


The coffee machine is ready. Beverage preparation touch icons are lit.  
Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

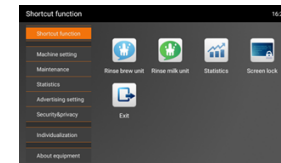


The SHORTCUT FUNCTION tab is highlighted.  
On the right, the shortcut function touch icons are lit.

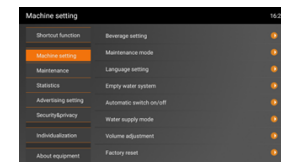


Select the MACHINE SETTINGS tab and activate it.  
The MACHINE SETTINGS tab is highlighted.

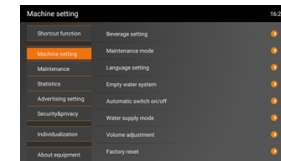


Enter the MAINTENANCE MODE tab.

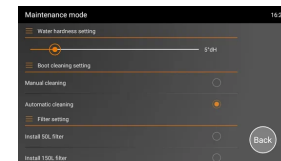

Scroll down to FILTER SETTING tab.  
When activating the mode of operation of the coffee machine using a filter, the CONFIRM INSTALLING THE FILTER window will open.  
Click "OK" to confirm the installation.

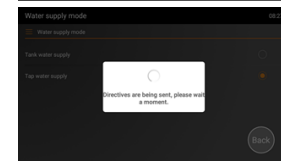

Display message: DIRECTIVES ARE BEING SENT, PLEASE WAIT A MOMENT.

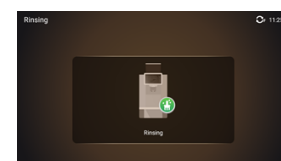

Display message: RINSING.  
A small amount of water is drained into the waste water tray.






When the setting is complete, the coffee machine enters beverage preparation mode.

## LANGUAGE SETTING




The coffee machine is ready. Beverage preparation touch icons are lit.

Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

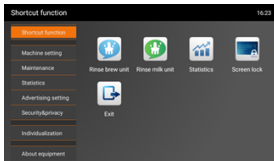


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

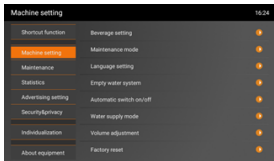

Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted. Select the LANGUAGE SETTING tab.



The display shows the languages that can be selected. Click the icon of the desired language. To exit the sub-menu, press BACK.

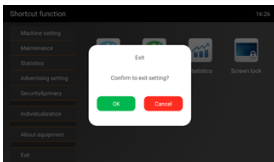


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Emptying water system (Emptying the System for Transportation)




The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

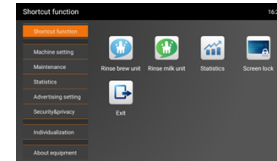


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

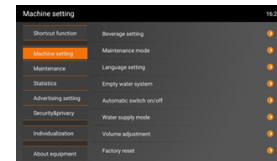

Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

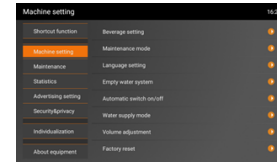

Enter the EMPTY WATER SYSTEM tab.

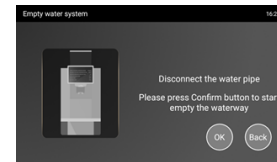

Display message: Remove water tank.

Fulfill the requirement of the coffee machine. Display message: WATER TANK REMOVED. PLEASE PRESS CONFIRM BUTTON TO START EMPTY THE WATERWAY. Press the "OK" button to confirm the start of the process.


Display message: EMPTY WATER SYSTEM. The system is drying up. A small amount of water is drained into the waste water collection tray. At the end of the process, the coffee machine turns off.

## AUTOMATIC SWITCH ON/OFF.




The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

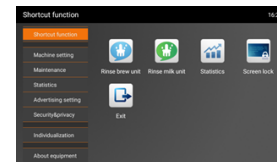

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

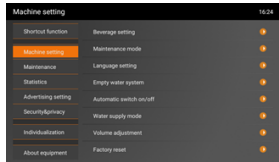

Press the AUTOMATIC SWITCH ON/OFF tab.

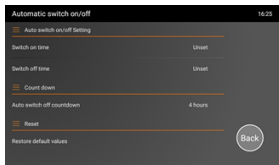


A sub-menu with tabs will open:  
 - Auto switch on/off setting  
 - Switch off time  
 - Reset


## Programming ON/OFF time settings




The coffee machine is ready. Beverage preparation touch icons are lit.  
 Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

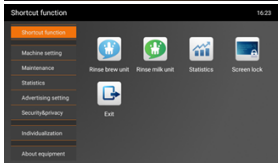


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

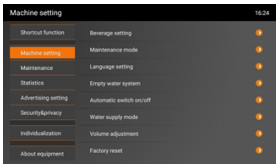


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

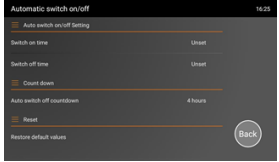

Press the AUTOMATIC SWITCH ON/OFF tab.

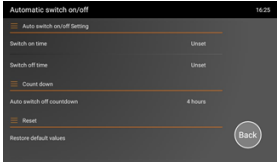

The AUTO SWITCH ON/OFF TIME SETTINGS window opens. By default, the auto on and off times are not set. To set the automatic switch-on time, press SWITCH ON TIME tab.

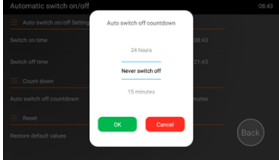

The time programming window will open. Select the desired time in hours and minutes and confirm your choice by pressing the "OK" button.




To set the automatic switch-on time, press SWITCH OFF TIME tab.



The time programming window will open. Select the desired time in hours and minutes and confirm your choice by pressing the "OK" button.




Press BACK to exit the time programming menu.

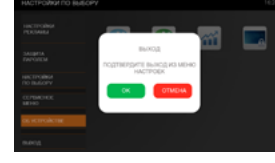


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Operating time settings


If the automatic switch-off function is activated, after completing the last operation, the coffee machine switches off automatically after the specified time has elapsed. In this model of the coffee machine, you can program the interval (15 min., 30 min., 1 hour - 24 hours interval 1 hour, as well as deactivate the automatic switch-off time).

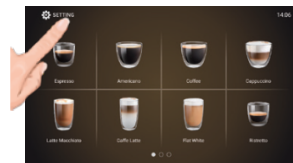


The coffee machine is ready. Beverage preparation touch icons are lit.  
 Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

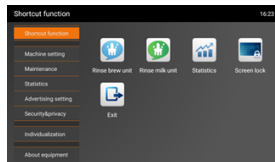


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

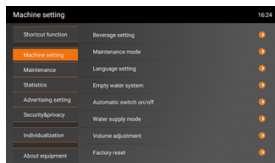


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

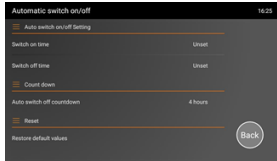

Press the AUTOMATIC SWITCH ON/OFF tab.

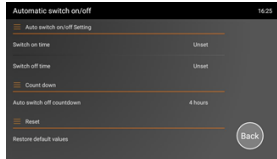

The AUTO SWITCH ON/OFF TIME SETTINGS window opens. By default, the auto on and off times are not set. To set the automatic switch-on time, press SWITCH ON TIME tab.

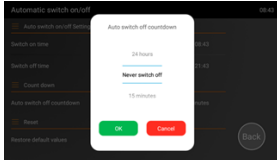

The default time interval is 4 hours. Select the desired time interval and confirm your choice by pressing the "OK" button.



Press BACK to exit the time programming menu




To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## RESET (to factory settings)




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

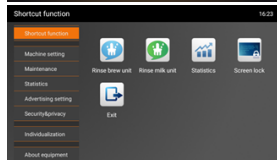

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

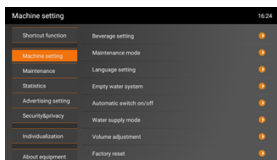


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

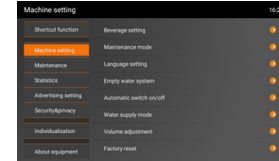

Press the AUTOMATIC SWITCH ON/OFF tab.



Scroll to the RESET tab. To return to the factory settings of the time, press on the RESTORE DEFAULT SETTINGS.

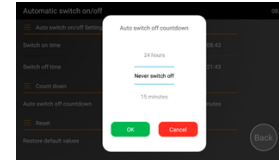

The RESET window will open. Press "OK" to confirm your choice.



Press BACK to exit the time programming menu.




To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Selection of water supply mode




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

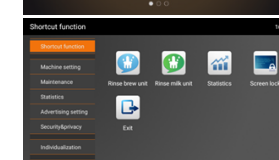


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

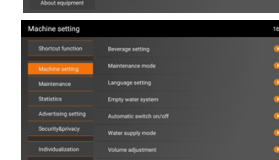


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

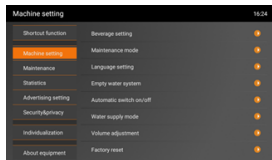


Press the "WATER SUPPLY MODE" tab. Select the operating mode you need.

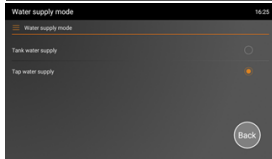


Select the operating mode you need.

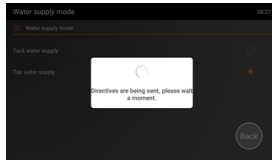

Display message: DIRECTIVES ARE BEING SENT, PLEASE WAIT A MOMENT. Settings have been saved.

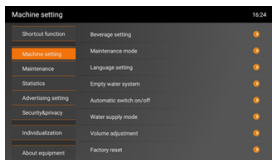


To exit the sub-menu, press BACK.

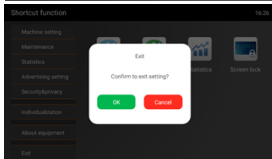

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Volume adjustment setting

In this menu item, you can adjust the volumes of water and coffee dispensed in the range from -20% to +20%, thus correcting possible overfilling and underfilling of beverages.

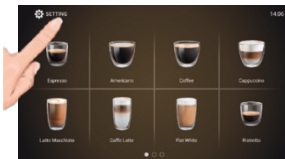


The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

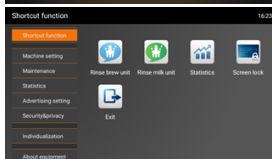


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

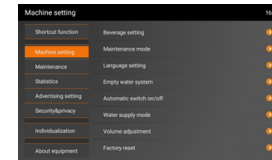


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

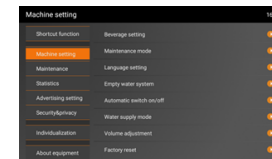


Choose the VOLUME ADJUSTMENT tab.

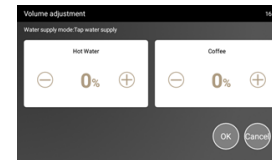

Set the desired value and press "OK" to save the selected value.

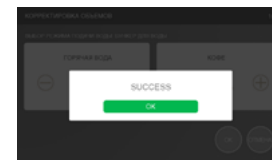


Display message: SUCCESS. Press OK to save current settings.

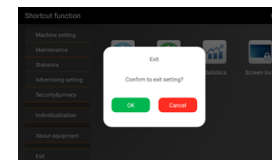


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Factory reset settings

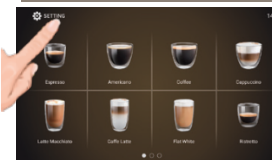


The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

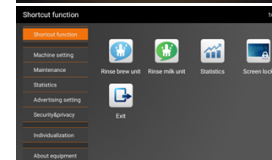

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

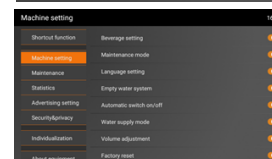


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

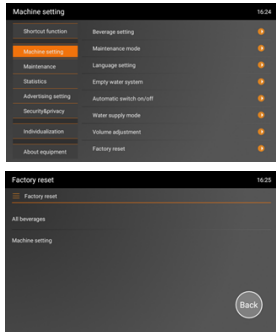

Press the FACTORY RESET tab.


A window with tabs will open:  
 - ALL BEVERAGES  
 - MACHINE SETTING

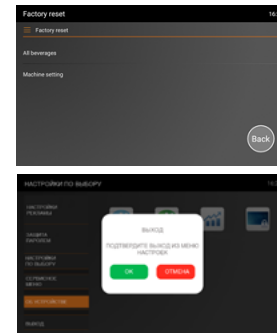

To exit the sub-menu press BACK

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Factory reset. ALL BEVERAGES item

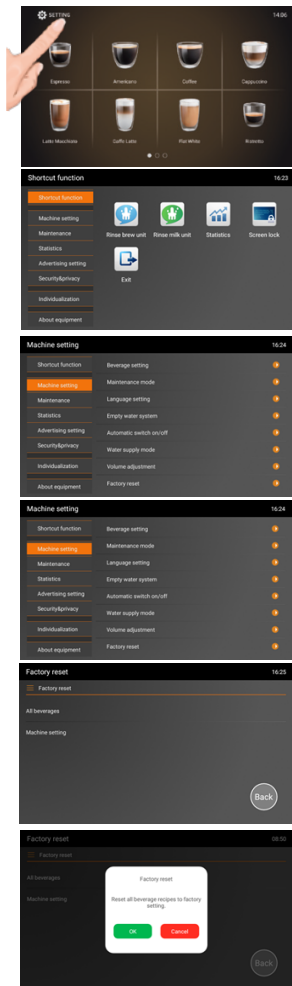

The coffee machine is ready. Beverage preparation touch icons are lit.  
 Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

The SHORTCUT FUNCTION tab is highlighted.  
 On the right, the shortcut function touch icons are lit.


Select the MACHINE SETTINGS tab and activate it.  
 The MACHINE SETTINGS tab is highlighted.

Press the FACTORY RESET tab.

A window with tabs will open:  
 Choose the ALL BEVERAGES tab.

Display message: RESET ALL BEVERAGE RECIPES TO FACTORY SETTINGS.  
 Confirm your choice by pressing the "OK" button.

## Factory reset. Machine settings. Return to the factory settings

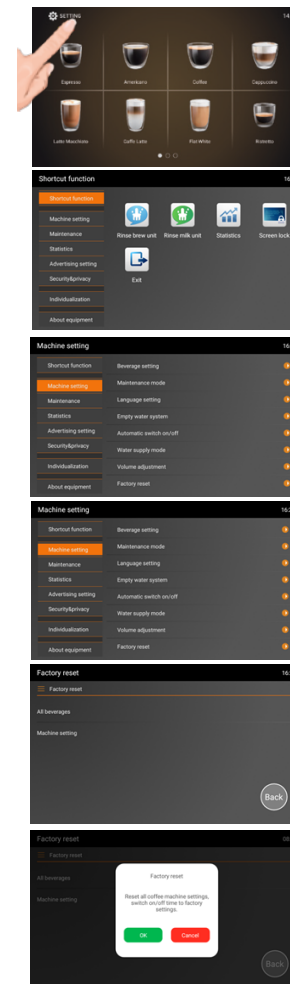

The coffee machine is ready. Beverage preparation touch icons are lit.  
 Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.


The SHORTCUT FUNCTION tab is highlighted.  
 On the right, the shortcut function touch icons are lit.

Select the MACHINE SETTINGS tab and activate it.  
 The MACHINE SETTINGS tab is highlighted.

Press the FACTORY RESET tab.

A window with tabs will open:  
 Choose the MACHINE SETTING tab.

Display message: FACTORY RESET. RESET ALL COFFEE MACHINE SETTINGS, SWITCH ON/OFF TIME TO FACTORY SETTINGS.  
 Confirm your choice by pressing the "OK" button.

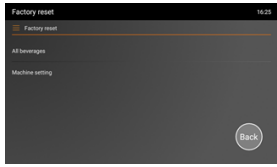

To exit the sub-menu press BACK.



To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Statistics

In this menu item, you can view information about all drinks prepared for the entire period of using the coffee machine and maintenance programs carried out, as well as information about beverages prepared during the current day and a calendar of service programs performed.


Since each coffee machine has been tested at the factory, when you first turn it on, you can detect a certain number of prepared servings by the counter. In order to view information about the operation of the coffee machine, you must perform the following steps:




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

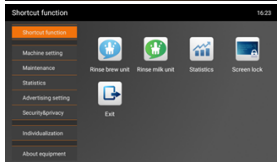

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

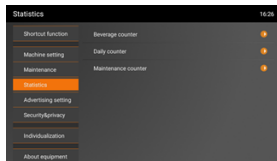


Select the MACHINE SETTINGS tab and activate it. The MACHINE SETTINGS tab is highlighted.

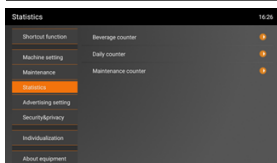

To view information about the number of drinks prepared, press the BEVERAGE COUNTER tab.




The top right corner shows the total number of beverages prepared. For a detailed view of each beverage, swipe up from the bottom of the display. To exit the sub-menu, press BACK.

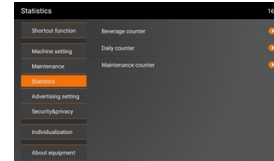

To view information about the number of beverages prepared during the day, choose the DAILY COUNTER tab.




The top right corner shows the total number of beverages prepared. For a detailed view of each beverage, swipe up from the bottom of the display. To exit the sub-menu, press BACK.

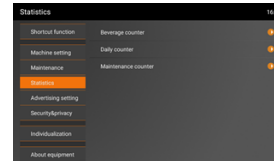

To view information about the number of maintenance programs performed and the log of recent cleanings, press the MAINTENANCE COUNTER tab.



In the last cleaning log, you can see the date and time of the last maintenance programs. In the archive of the cleanings carried out - the number of programs carried out for the entire period of time. To check the number of cleanings of the brewing unit, activate the "CLEAN BREW UNIT WITH CLEANING TABLETS" tab. The total number of completed programs is displayed below. To check the number of cleanings of the milk unit, activate the CLEAN MIK UNIT WITH CLEANING AGENT tab. The total number of completed programs is displayed below. To check the number of descaling performed, activate the DESCALING tab. The total number of completed programs is displayed below. To exit the sub-menu, press BACK.

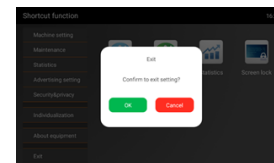

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Advertising settings

This menu item will allow you to set up advertising playback:

- when you turn on the coffee machine
- during the preparation of beverages
- at the end of the preparation of the beverage.

**ATTENTION!** Only MP4 format is supported.


## Advertising settings. ADs in standby mode

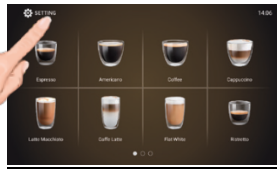


The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.



The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

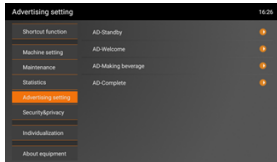


Select the ADVERTISING SETTING tab and activate it. The ADVERTISING SETTING tab is highlighted.

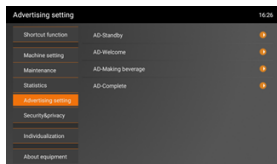


Select the AD-STANDBY option from the ADVERTISING SETTING tab.

A tabbed window will open:

- STORAGE LOCATION
- VOLUME
- LOCAL VIDEO AD

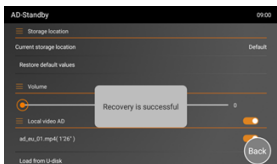

STORAGE LOCATION tab. By default, the current video storage location is in the memory of the coffee machine. The maximum available storage space is 8 GB. To clear the storage space, activate the RESTORE DEFAULT VALUES tab.

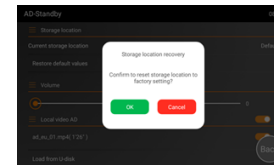


A window will open: CONFIRM TO RESET STORAGE LOCATION TO FACTORY SETTING?. To confirm the reset, press "OK" or "CANCEL" to cancel the action.




VOLUME tab - here you can set the volume of a video playback. Move the cursor from left to right to set a comfortable value for you.




LOCAL VIDEO AD tab. All uploaded videos are displayed here. Select the video you want and turn it on for playback. To upload a new video, insert a USB flash drive into the USB slot (located to the right of the display), activate the LOAD FROM U DISK tab.

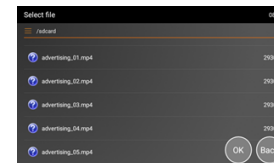


A SELECT FILE window will open. Select the desired file and press OK.

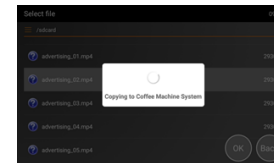

Display message: COPYING TO COFFEE MACHINE SYSTEM. The file is automatically saved to the coffee machine's memory.

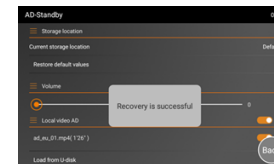

To exit the sub-menu press BACK.

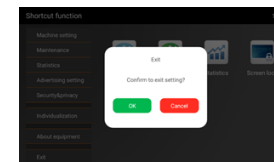


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Advertising settings. Welcome ADs




The coffee machine is ready. Beverage preparation touch icons are lit.  
Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

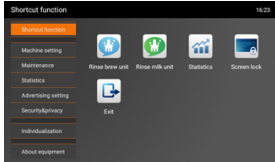

The SHORTCUT FUNCTION tab is highlighted.  
On the right, the shortcut function touch icons are lit.

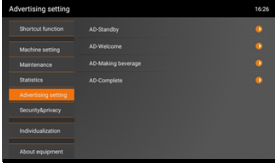

Select the ADVERTISING SETTING tab and activate it. The ADVERTISING SETTING tab is highlighted.

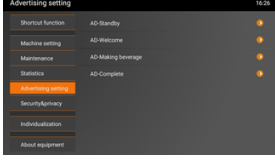

Select the AD-WELCOME option from the ADVERTISING SETTING tab.


A tabbed window will open:

- LOCAL VIDEO AD
- VOLUME



LOCAL VIDEO AD tab.


The factory loaded video is used by default. To clear the storage space, activate the RESTORE DEFAULT VALUES tab.

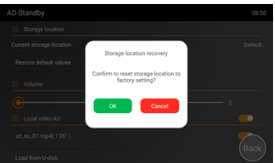

A window will open: CONFIRM TO RESET STORAGE LOCATION TO FACTORY SETTING?.  
To confirm the reset, press "OK" or "CANCEL" to cancel the action.



VOLUME tab - here you can set the volume of a video playback. Move the cursor from left to right to set a comfortable value for you.

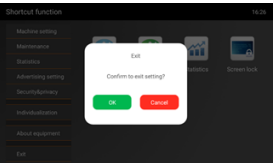

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Advertising settings. ADs while making a beverage




The coffee machine is ready. Beverage preparation touch icons are lit.  
Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.



The SHORTCUT FUNCTION tab is highlighted.  
On the right, the shortcut function touch icons are lit.

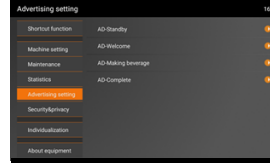

Select the ADVERTISING SETTING tab and activate it. The ADVERTISING SETTING tab is highlighted.

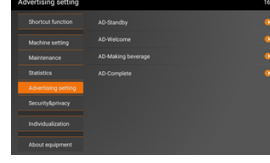

Select the AD-MAKING BEVERAGE option from the ADVERTISING SETTING tab.


A tabbed window will open:

- LOCAL VIDEO AD
- COUNT DOWN
- VOLUME




LOCAL VIDEO AD tab.

The factory loaded video is used by default. To clear the storage space, activate the RESTORE DEFAULT VALUES tab.

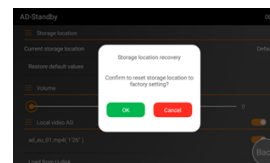

A window will open: CONFIRM TO RESET STORAGE LOCATION TO FACTORY SETTING?.  
To confirm the reset, press "OK" or "CANCEL" to cancel the action.

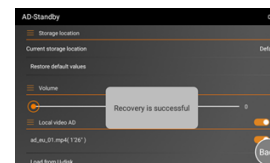


COUNT DOWN tab.

Here you can select the format for playing the video during the preparation of beverages. Available values are 3, 5, 10 seconds or close. If you select the time range of 3.5 or 10 seconds, the video playback during the preparation of the beverages will be played in full screen mode.




For the convenience of changing the beverage recipe during preparation, select the "BACK" value. The video will play on the left side of the display and the drink recipe will be shown on the right side.

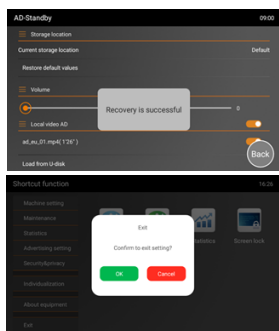

VOLUME tab - here you can set the volume of a video playback. Move the cursor from left to right to set a comfortable value for you.

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Advertising settings. ADs after the beverage preparation

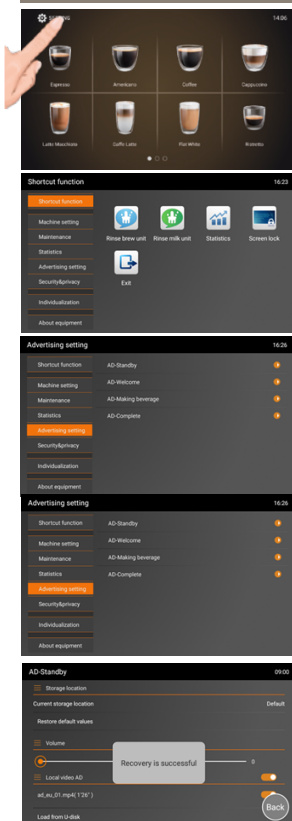

The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

Select the ADVERTISING SETTING tab and activate it. The ADVERTISING SETTING tab is highlighted.

Select the AD-COMPLETE option from the ADVERTISING SETTING tab.


A tabbed window will open:  
- STORAGE LOCATION

STORAGE LOCATION tab. By default, the current video storage location is in the memory of the coffee machine. The maximum available storage space is 8 GB. To clear the storage space, activate the RESTORE DEFAULT VALUES tab.

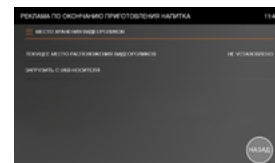


To upload a new video, insert a USB flash drive into the USB slot (located to the right of the display), activate the LOAD FROM U DISK tab.

**Note:** Only 1 video can be uploaded.

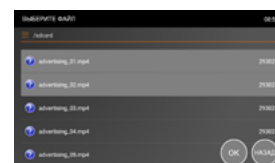


A SELECT FILE window will open. Select the desired file and press OK.


When the download is complete, a tabbed window will open: STORAGE LOCATION/ SELECT DEFAULT SETTINGS / STANDARD VIDEO PLAYBACK FORMAT.

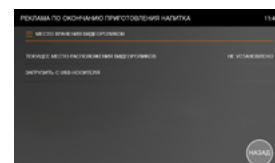


CURRENT STORAGE LOCATION tab. The downloaded file from the USB drive is displayed here. To change the current clip to a new one, you need to clear the storage space. To clear the storage space, activate the RESTORE DEFAULT VALUES tab.

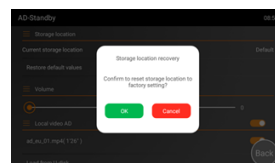

A window will open: CONFIRM TO RESET STORAGE LOCATION TO FACTORY SETTING?. To confirm the reset, press "OK" or "CANCEL" to cancel the action.

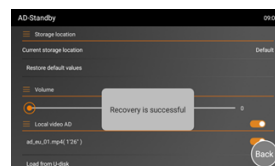

Display message: RECOVERY IS SUCCESSFUL

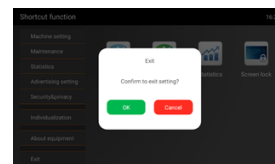

COUNT DOWN tab. Here you can select the format for playing the video during the preparation of beverages. Available values are 3, 5, 10 seconds or close. If you select the time range of 3.5 or 10 seconds, the video playback during the preparation of the beverages will be played in full screen mode.

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Security&Privacy

In this menu item you can set and activate a password to enter the programming menu. To activate the operating mode of the coffee machine with a password request, you must perform the following steps:




The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

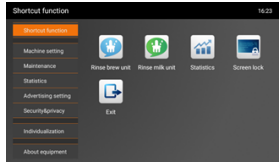


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

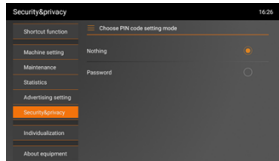

Select the SECURITY&PRIVACY tab and activate it. By default, the coffee machine is set to NOTHING (no password mode). The no password mode provides free access to the programming menu.

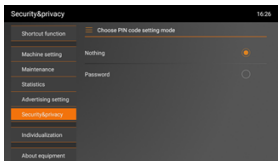

To secure access to the programming menu, select PASSWORD. When the mode is activated, the INPUT PIN-CODE window will open.

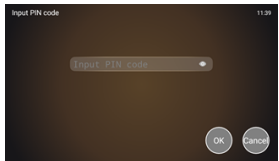


To activate the password in the settings, enter 6 characters to create a password. Activating the field will open the keyboard. Dial 6 digits and press OK icon. Re-enter the password in the second field.

Press "OK" to activate the password.

If the correct redial is entered, the password will be activated. Now, when you enter the programming menu, the display will prompt ENTER PASSWORD window.



If you retyped the password incorrectly, the PIN CODE ERROR window pops up.

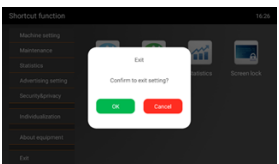

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


## Individualization

In this menu item you can:

- activate instant access to the shortcut option.
- activate the prompt for confirming the installation of the cup.
- enable/disable settings changes during beverage preparing.
- activate protection against accidental ON / OFF.


## Individualization. Shortcut function options.

To activate instant access to the shortcut function, do the following:

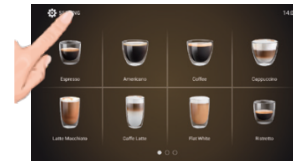


The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

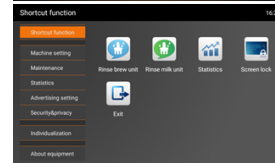

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

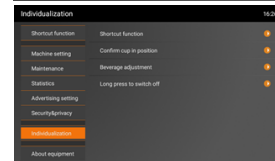

Select the INDIVIDUALIZATION tab and activate it.

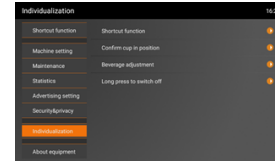

Select the SHORTCUT FUNCTION tab.



The "SHORTCUT FUNCTION" window will open with two options to choose from "OPEN" and "CLOSE".


If "CLOSE" is selected, access to the quick menu will be possible (will open) only through entering the programming menu.



When you select "OPEN" in ready mode, simply swipe up from the bottom of the screen and the SHORTCUT FUNCTION touch icons will appear at the bottom of the display. In order to hide the icons of the quick menu, simply press any of the required icons or enter the setting menu by pressing and holdig the setting icon for 2 seconds.




To exit the sub-menu press BACK.

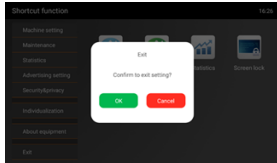


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


### Individualization. Confirming the cup in position.

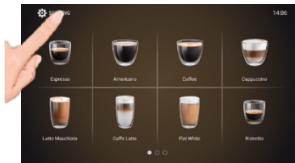


The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

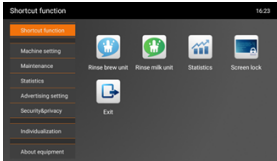

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

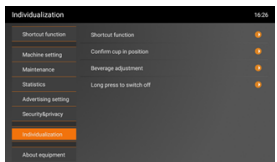

Select the INDIVIDUALIZATION tab and activate it.

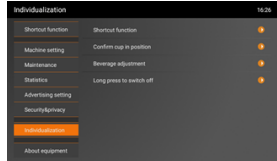

Select the CONFIRM THE CUP IN POSITION tab.




The CUP POSITION CONFIRMATION window will open with two options to choose from: OPEN and CLOSE. If you select CLOSE, beverage preparation will start as soon as the beverage icon is pressed.



When you select the "CLOSE" value, a window will open with the name of the beverage you have chosen and the countdown will begin from 10 to 0 seconds. The coffee machine display prompts you to insert the cup before making a beverage. With a value of 0 seconds, the preparation of the beverage will begin. To cancel the preparation of the drink, press "BACK".



To exit the sub-menu press BACK.

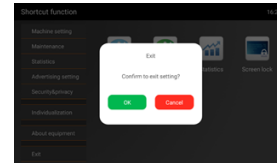


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


### Individualization. Beverage adjustment.




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

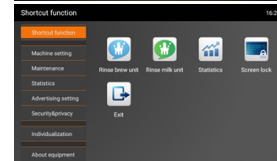

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

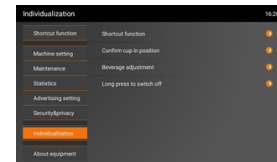

Select the INDIVIDUALIZATION tab and activate it.

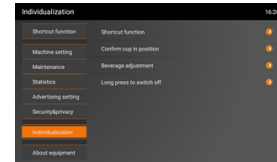

Select the BEVERAGE ADJUSTMENT tab.




The "BEVERAGE ADJUSTMENT" window will open with two options to choose from "OPEN" and "CLOSE". If you select "CLOSE", options such as changing the strength and volume of the beverage during preparation will become inaccessible, and the navigation buttons will be blocked.



If you select the "OPEN" value, changing the beverage recipe (strength and volume) during preparation will become possible.



To exit the sub-menu press BACK.

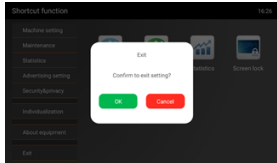


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.


### Individualization. Protection against accidental pressing.




The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

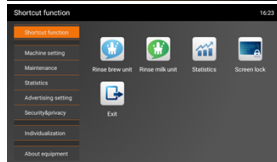

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

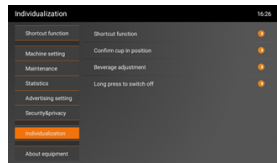

Select the SECURITY&PRIVACY tab and activate it.

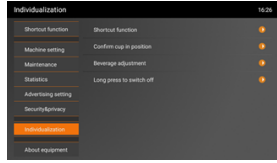

Select the LONG PRESS TO SWITCH OFF tab.



The LONG PRESS TO SWITCH OFF (for three seconds) window opens, with two values to choose from "OPEN" and "CLOSE".




If "CLOSE" is selected, the coffee machine will turn on and off automatically when the button is pressed.



When "OPEN" is selected the coffee machine will turn on and off only after holding the button for 3 seconds.




To exit the sub-menu press BACK.

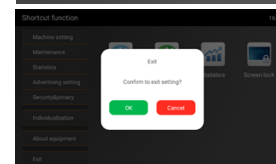


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

### About equipment.


Follow these steps to verify the serial number of the coffee machine.

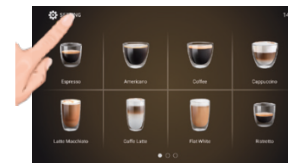


The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

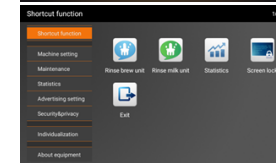

The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

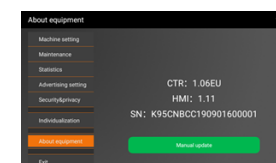


Select the ABOUT EQUIPMENT tab and activate it. The ABOUT DEVICE tab is highlighted. Information about your coffee machine (CTR and HMI firmware versions) is displayed on the right. SN is the serial number.

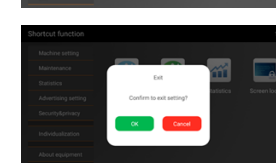

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Water connection

### Water connection group

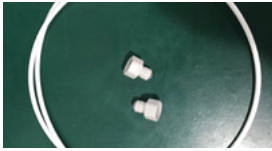

Water connection group.

Initially, the coffee machine is set to use water from the water tank. Therefore, before connecting to the water supply, switch on the coffee machine for the first time.



1. Fill the water tank with water.



2. To turn on the coffee machine, press and hold the switch ON button. Next, you will be asked to go through several steps to set up the coffee machine's operating modes. When switched on for the first time, the self-diagnosis process starts automatically, the system is filled with water and flushing starts.



3. The coffee machine is ready to go. Beverage preparation touch icons are lit.

Then follow the following instructions:

To connect the coffee machine to the water supply, contact a qualified technician. Incorrect connection to the water supply is not covered by the warranty!

### Step 1. Technical connection to the water supply



1. Remove the hexagon plug located on the back wall of the coffee machine.



2. Firmly connect one end of the hose (connection 1/2) to the socket in the coffee machine.




3. Connect the other end of the hose (connection 2/2) to the softener/water filtration system.

### Step 2. Service settings for connecting to the water supply





The coffee machine is ready. Beverage preparation touch icons are lit.

Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

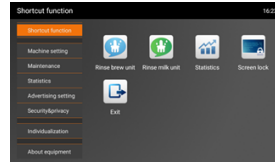


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.


Select the MACHINE SETTING tab. Choose the WATER SUPPLY MODE tab.

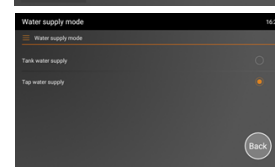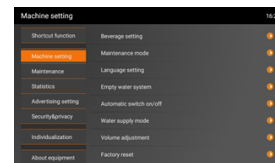


Select the operating mode you need - TAP WATER SUPPLY.

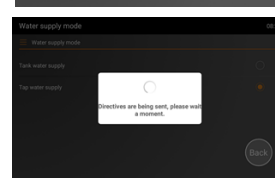

Display message; DIRECTIVES ARE BEING SENT, PLEASE WAIT A MOMENT.

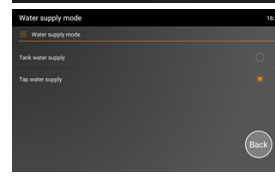

To exit the sub-menu press BACK.

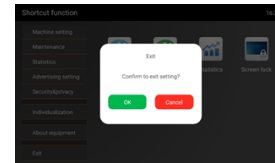

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Disposal of coffee waste

Your K96L coffee machine is available for direct disposal of coffee grounds under the countertop. For this you need:

1. Cut out a circle with a diameter of 8 cm in the countertop.
2. Remove the ground coffee container from the drip tray.

The coffee machine is ready to go.

Over time, after about 40 servings, the coffee machine will issue a request to empty the coffee grounds "EMPTY COFFEE CONTAINER". Beverage preparation is not possible. To reset the request, pull out the tray for a few seconds and put it back. Beverage making is now available.

## Waste water discharge



The K96L coffee machine is supplied with a hose for direct discharge of waste water from the drip tray.

Length - 2 meters

Outer tube diameter - 19.73 mm

Inner tube diameter - 13.71 mm


When this option is enabled, the request "DRIP TRAY IS FULL" will not appear. Drainage can occur both in any enlarged container under the tabletop, and connected directly to the sewerage system (the kit for connecting the drain to the sewerage system is an additional option).

## Maintenance


If you want your coffee machine to serve for a long time and always provide excellent quality of drinks, do not forget to service it daily.



The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

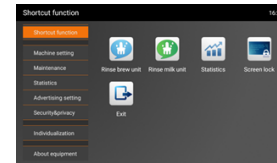


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

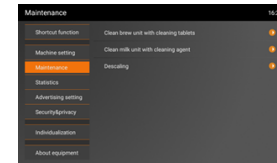

Select the MAINTENANCE tab. The MAINTENANCE tab is highlighted.

## Cleaning brewing unit with tablet


During the operation of your coffee machine, coffee oils settle on the brew unit and internal coffee tubes, which leads to a significant deterioration in the taste characteristics of beverages and even to equipment failure. Therefore, over time (~250-280 cups) it is necessary to clean the brew unit

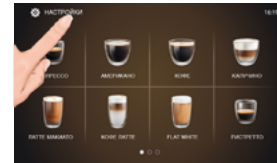


The cleaning process will take about 20 minutes. The cleaning process must not be interrupted!

The coffee machine is ready. Beverage preparation touch icons are lit.


Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

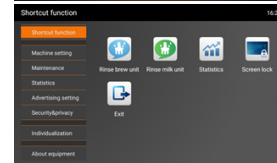


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

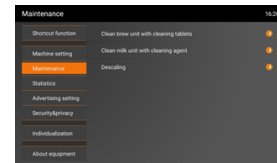

Select the MAINTENANCE tab. The MAINTENANCE tab is highlighted.

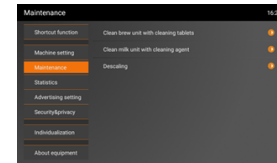

Select the CLEAN BREW UNIT WITH CLEANING TABLETS option.

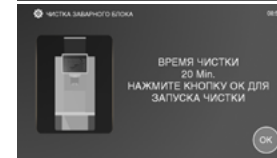


Display message: "CLEANING TIME 20 Min. PRESS THE OK BUTTON TO START CLEANING. Fulfill the requirement of the coffee machine.



Display message: DRIP TRAY IS FULL. Pull out the tray, remove the coffee grounds and empty the waste water.



Display message: INSTALL THE DRIP TRAY. This message will remind you that after emptying, the drip tray must be placed in the coffee machine. Place a container with a capacity of 0.7 l under the coffee spout.

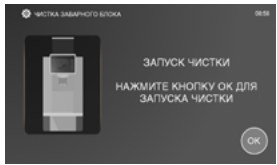


Display message: CLEANING START. PRESS THE OK BUTTON TO START CLEANING. Fulfill the requirement of the coffee machine.




The status bar of the cleaning process is lit. Be careful! A small amount of hot water comes out of the coffee spout.




Display message ADDING TABLETS. CLICK OK BUTTON TO START CLEANING. Open the compartment cover and drop the cleaning tablet into it. Close the compartment cover. Press the "OK" button to start cleaning.

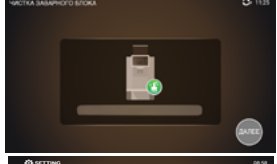


Display message: CLEANING BREW UNIT WITH CLEANING TABLETS.

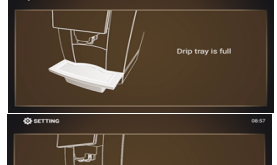

Upon completion of the cleaning process, the display prompts: DRIP TRAY FULL / INSTALL DRIP TRAY. Fulfill these requirements.

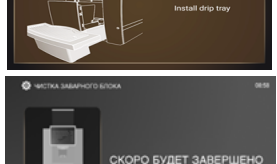

Display message: WILL BE COMPLETED SOON.

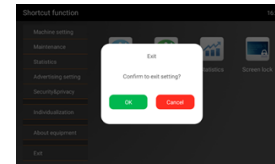


To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Cleaning the milk unit.


If you are using the milk preparation function, the Auto Cappuccino system must be cleaned daily to ensure that it functions properly.



The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

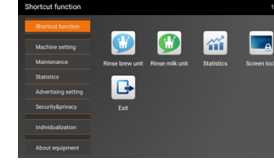


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

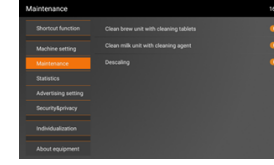

Select the MAINTENANCE tab. The MAINTENANCE tab is highlighted.



Press CLEAN MILK UNIT WITH CLEANING AGENT tab.

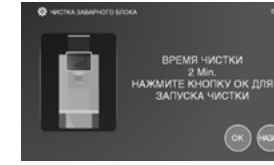

Display message: CLEANING TIME 2 Min PRESS THE OK BUTTON TO START CLEANING. Click "OK" to start the cleaning process.



Display message: ADD CLEANING AGENT. CLICK OK BUTTON TO START CLEANING. Pour 250 ml of water into a separate container and add the cleaning agent to it. Please refer to the instructions that come with it for the correct dosage. Dip the milk tube into the prepared solution. Place an empty 0.7 L container under the combination spout. Click "OK" to start the cleaning process.




Display message: CLEAN MILK UNIT WITH CLEANING AGENT.



Display message: ADD WATER 250ml. CLICK OK BUTTON TO START CLEANING. Prepare the specified volume of clean water to rinse the system of cleaning agent. Press the "OK" button to complete the process.



Display message: CLEAN MILK UNIT WITH CLEANING AGENT.

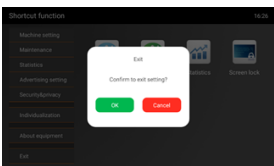

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

## Descaling the coffee machine

- The daily usage will cause lime deposits in coffee machine. The depositing rate varies with the local water hardness.
- Decalcifier contains acidic substances that would irritate your eyes and skin, so you must strictly comply with the security warnings noted by manufacturer on the packaging. If you have contacted it with your eyes or skin by accident, please wash it with clean water immediately.
- To prevent damage to your coffee machine, use only original cleaning products.
- A complete descaling cycle takes 40 minutes.
- Interrupting the descaling process may damage the coffee machine.




Once you have started the descaling process, please do not interrupt it!


Dissolve 1 portion of KAFFIT.com cleaning agent in 1 liter of water (coffee machine with a 1.8 l tank).

Dissolve 2 portions of KAFFIT.com cleaning agent in 2 liters of water (coffee machine with a 6.0 l tank).


The coffee machine is ready. Beverage preparation touch icons are lit. Press and hold the "SETTINGS" button for 2 seconds to enter the programming menu.

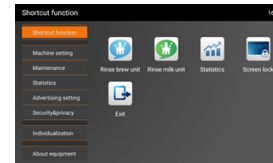


The SHORTCUT FUNCTION tab is highlighted. On the right, the shortcut function touch icons are lit.

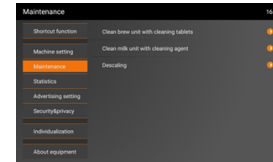

Select the MAINTENANCE tab. The MAINTENANCE tab is highlighted.

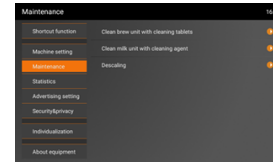


Select DESCALING.

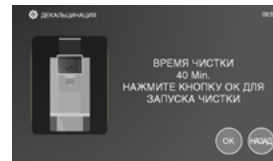

Display message: CLEANING TIME 20 MIN. PRESS OF TO START THE DESCALING PROCESSES.



Display message: DRIP TRAY IS FULL. Pull out the tray, remove the coffee grounds and empty the waste water.

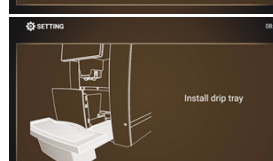

Display message: INSTALL THE DRIP TRAY. This message will remind you that after emptying, the drip tray must be placed in the coffee machine. Place a container with a capacity of 0.7 l under the coffee spout.



Display message: REMOVE THE MILK UNIT TUBE FROM THE MILK CONTAINER.


Display message: CLEAN THE WATER TANK AND FILL IT WITH WATER. PRESS CONFIRM BUTTON TO CONTINUE DESCALING.

Dissolve the required amount of cleaning agent in 1 liter or 2 liters of water (depending on the configuration of the coffee machine), then pour the resulting solution into the empty water tank and place it in the coffee machine. During the first cleaning step, place a 0.7 l container under the coffee spout. Press the "OK" button.





Display message: DESCALING.

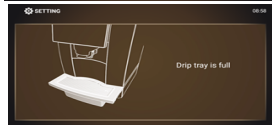


The display prompts: DRIP TRAY FULL / INSTALL DRIP TRAY. Fulfill these requirements.




Display message: CLEAN THE WATER TANK AND FILL IT WITH WATER. PRESS CONFIRM BUTTON TO CONTINUE DESCALING


At the end of the first cleaning step, remove the water tank and rinse it well. Fill it with clean water and put it back in the coffee machine. Place a container with a capacity of 0.5 l under the coffee spout. Press the OK button to start the second cleaning step.

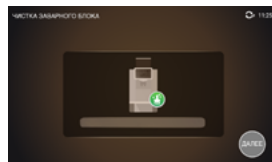


Display message: DESCALING.

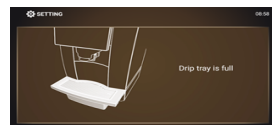

The display prompts: DRIP TRAY FULL / INSTALL DRIP TRAY. Fulfill these requirements.

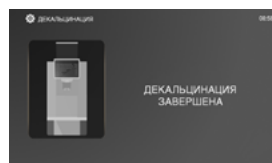

Display message: DESCALING COMPLETE.

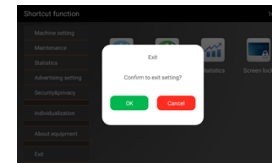

To exit the menu, press the EXIT touch icon and confirm your choice by pressing the OK button.

### Cleaning coffee grounds container and drip tray.

- Do not use chemical solvents, abrasive or aggressive cleaners to clean the coffee grounds container and waste water tray.
- The drip tray and coffee grounds container are not dishwasher safe.
- Do not use metal objects or abrasive materials to clean the metal contacts of the waste water tray.
- If you want your coffee machine to serve for a long time, do not forget to service it daily.



Over time, the display will automatically show the message: "DRIP TRAY IS FULL".

Display message: "INSTALL DRIP TRAY". Please remove coffee grounds from the container. Place the drip tray back into the coffee machine. Press the rotary control to reset the request.

Display message: READY.

If the drip tray is full, the display will automatically show the message "DRIP TRAY IS FULL". Remove the waste water collection tray and empty it.

Place the drip tray back into the coffee machine and it will automatically go into standby mode. Display message: READY TO WORK.

Every time you clean the coffee grounds container, please also clean the waste water tray. After cleaning the drip tray, please dry the metal contacts and then put it back into the machine.

## Cleaning water tank

Lime deposits can form on the walls of the water tank over time, so it is necessary to periodically clean the tank from such deposits:

- Rinse the hopper daily with running water before adding water.
- Clean the hopper about once every two months. For cleaning, use gentle descaling agents in accordance with the operating instructions of the respective manufacturer.
- If the water tank is damaged, contact the service center.



## Cleaning the bean hopper

- An oil film forms on the walls of the coffee bean hopper over time. It impairs the taste characteristics of the beverage. For this reason, it is necessary to clean the coffee bean hopper.
- Please use a dry cloth or paper towel to clean the coffee oils from the hopper.
- The coffee hopper lid serves to preserve the aroma of the coffee beans. If the lid of the coffee bean hopper is damaged, please contact the service center.



## Disassembling and cleaning the auto-cappuccino system

To ensure an excellent result when preparing drinks with milk, please clean the built-in Auto Cappuccino system daily.

1. Carefully remove the milk pipe. (photo 1).
2. Press the release elements and carefully remove the Auto Cappuccino system by pulling it down (photo 2).
3. Disassemble it into separate parts in the sequence indicated on (photo 3).
4. Rinse each part thoroughly under running water.
5. Dry and reassemble the Auto Cappuccino system. Make sure that all the individual parts are correctly and firmly connected to each other to ensure optimal functioning of the device.
6. Install the Auto Cappuccino system and fix it firmly (photo 4).



photo 1



photo 2



photo 3



photo 4

## Cleaning the milk pipe

To keep the milk pipe clean, please wash it every day.

- Carefully remove the milk pipe.
- Rinse the pipe under running water.
- Shake the pipe to remove any remaining water.
- Connect the milk pipe to the Auto Cappuccino system with right side of the combination dispenser.



## Daily care

- For daily maintenance, please turn off coffee machine from the mains.
- Never immerse the coffee machine in water! There is a risk of getting electric shock.
- Regularly check for spilled coffee inside the coffee machine. Remove excess coffee with a brush.
- Please use a dry microfiber cloth to clean the display. The touch panel with indicator buttons is made of glass, be careful not to damage it.
- Please use a dry soft cloth or paper towel to clean the surfaces of the coffee machine. Never use abrasive materials, as this will damage the surfaces.



## Additional functionality: payment system

The following payment systems can be used in the KAFFIT.com K96L coffee machine:

- Payment by QR-code:

The coffee machine is in a locked state. When you select a beverage, a QR-code appears on the display of the coffee machine, which you need to read and pay in a mobile banking application. After payment, the coffee machine prepares the selected beverage and returns to the locked state again. It is possible to set different prices for different types of coffee beverage.

- Payment via PayPass terminal:

The coffee machine is in a locked state. When you select a beverage, the coffee machine displays an offer to pay for it through a payment terminal (connects to the coffee machine via Bluetooth) using a credit card with a smart chip. After payment, the coffee machine unlocks the preparation of the selected beverage and returns to the locked state again. It is possible to set different prices for different types of coffee beverages.

## Trouble-shooting

This section is devoted to possible malfunctions that may occur during operation, as well as their elimination.

If you cannot solve the problem, please contact the technical support or service center.



Problem	Cause	Solution
Coffee beverage is not hot enough	1. The coffee cup was not heated.	Before preparation, preheat the coffee cup with hot water or steam.
	2. More than 30 minutes have passed since the preparation of the previous drink. The brewer and inner tubes have already cooled down.	Start the forced rinsing process of the coffee machine (pg. 17).
	3. Insufficient beverage brewing temperature is set.	Enter the programming menu on the Beverage setting page and increase the coffee brewing temperature.
Coffee comes out of the coffee spout in separate drops	1. The grind setting is too fine or you are using ground coffee that is not suitable for espresso coffee.	Adjust the grind lever to a coarser setting or use ground coffee marked "For espresso machines" on the packaging.
	2. The sieve of the brew unit is clogged.	Forcibly start the brew unit rinse program (pg. ).
The coffee grinder is making a lot of noise	Foreign objects have fallen into the grinder.	Please contact the service center.
Milk does not foam	The Auto Cappuccino system is clogged.	Start rins milk unit programm (pg. ).
Milk splashing	The milk unit is not assembled or installed correctly.	Disassemble and reassemble the milk unit. Install the milk unit and fix it firmly.
The message is permanently lit on the display <b>"DRIP TRAY IS FULL"</b>	The drip tray is full. Beverage preparation is not possible.	Empty the drip tray.
The message is permanently lit on the display <b>"INSTALL DRIP TRAY"</b>	Drip tray installed incorrectly or missing. Beverage preparation is not possible.	1. Install the drip tray correctly. 2. Carefully clean the metal contacts on the drip tray and wipe them dry.

The message is permanently lit on the display <b>"ADD WATER"</b>	1. The water tank is empty.	Fill the water tank.
	2. The water tank is full. A float has stuck in the water tank.	Rinse the water tank thoroughly.
The message is permanently lit on the display <b>"GRINDER FAILURE"</b>	The coffee bean hopper is empty.	Fill the hopper with coffee beans. Prepare a beverage and the prompt will disappear.
Display message <b>"ERROR 1-7"</b>	Beverage preparation is not possible.	Restart the coffee machine. If the error message does not disappear, turn off the coffee machine and contact the service center.

## Display messages

This section contains information about messages that may appear on the display of the coffee machine.

Message	Cause	Solution
<b>EMPTY TRAY</b>	If the water drip tray is full, any function of making beverage will be out of service.	Empty the drip tray, rinse it, clean and dry the metal contacts on the drip tray and put the drip tray back into the coffee machine.
<b>EMPTY GROUNDS</b>	If the coffee grounds container is full, any function of making beverage will be out of service.	Take the coffee grounds container out, empty the coffee grounds container and reinstall it.
<b>FILL WATER TANK</b>	If water in the tank is used up, any function of making beverage will be out of service.	Fill the water tank with water.
<b>FILL BEANS</b>	If coffee beans in the bean container are used up, function of making coffee will be out of service.	Add beans into bean container and prepare a beverage.
<b>INSTALL TRAY</b>	The drip tray is not installed correctly; any function is out of service.	1. Install the drip tray correctly. 2. Clean and dry the metal contacts on the drip tray and put the drip tray back into the coffee machine.
<b>PRESSURE HIGH</b>	The system has been vented. Air has entered the internal tubes of the coffee machine. Any functions are not available.	Press the OK button to correct this problem. The self-diagnostic process starts automatically.

## Transportation and recycling

- Please sAve the packaging of the coffee machine for future transportation.
- Make sure to empty the water from water tank, water waste and coffee grounds from the drip tray. Otherwise it will damage the machine.
- To protect your coffee machine from freezing temperatures during transport, you must empty the waterway of the coffee machine. Wipe the coffee machine both inside and outside to dry.
- Hot steam will come out of the coffee spout while the coffee machine is drying. Please pay special attention to this to avoid burns.



To transport the coffee machine during the cold season, please follow the steps described on page 30.

## Recycling

Old equipment contains parts that can be recycled and reused. Dispose of old equipment in an environmentally responsible manner.

## Technical Data

Voltage/Frequency	220-240 V / 50-60 HZ
Heating power	2700 W
Pump pressure	19 Bar(2 pumps, 2 thermoblocks)
Lenght of power cord	1.8 m
Gross weight (with packaging)	24.33 kg
Dimensions (Length× Width ×Height)	590 x 535 x 710 mm
Recomended daily output	120 cups
Maximum output, h.	up to 60 cups/h.
Bean hopper capacity	1000 g
Water tank capacity	6 l / tap water connection
Drip tray capacity	2 l / sewege connection
Coffee grounds container	~ 40 servings
Wireless technologies	Wi-Fi / GPRS / NFC / RFID
Payment system	QR-cod, PayPass (plastic card with a smart-chip)
Fiscalisation	Displaying a QR-code link to the fiscal receipt on the screen (relevance 20 sec.)

\* Performance was determined by the preparation of drinks with a fixed supply of water, settings and compliance with the breaks between preparations.

\*\* The manufacturer reserves the right, without prior notice to the Buyer, to make changes to the design and configuration of the coffee machine in order to improve its properties.