

Model X Series

Fully-Automatic Coffee Machine

Model X580



Dear Customer,

Thanks a lot for purchasing X6 series Coffee machine.
This is a multifunction coffee machine for Espresso,
Americano, various milk beverages, chocolate beverages
and hot water.

We believe the machine adapts to your customer needs
to the greatest extent.
Hope you enjoy it and also wish you have excellent
experience from it.



Content

1 For your safety	01
1.1 Proper use	01
1.2 Prerequisites for using the coffee machine	01
1.3 Explanation of safety symbols	02
1.4 General safety concerns when using the coffee machine	02
2 Description of machine	04
2.1 Machine overview	04
2.2 Screen interface	06
2.3 Scope of delivery	08
2.4 Technical data and symbols on the panel	09
3 Installation	10
3.1 Installation tips	10
3.2 Dimensions	10
3.3 Installation location	12
3.4 Electrical connection	12
3.5 Water supply connection	12
4 Start-up for the first time	13
4.1 Material filling	13
4.2 Initially start-up program setting	13
5 Operation	14
5.1 Coffee beans filling	14
5.2 Powder filling	15
5.3 Water tank filling	15
5.4 Milk connection	16
5.5 Empty bean hopper	17
5.6 Empty powder hopper	18
5.7 Switch on machine	19
5.8 Beverage preparation	19
5.9 Steam output	22
5.10 Grinding coarseness setting	22
6 Program setting	23
6.1 Access to the menu	23

Content

6.2 Program setting menu tree	24
6.3 Care	25
6.4 Beverage	27
6.5 System	33
6.6 Operation panel	37
6.7 User	41
6.8 Language	42
6.9 Statistics	42
6.10 Help	43
6.11 IOT function	44

7 Cleaning and maintenance 45

7.1 Cleaning intervals overview	45
7.2 Parts preparation	45
7.3 Daily cleaning	46
7.4 Weekly cleaning	48
7.5 Brew unit cleaning if presents	52
7.6 Milk system cleaning if presents	53
7.7 Descaling if presents	54

8 Messages and explanation 55

8.1 Operational messages	55
8.2 Error message	57

9 Decommissioning 60

9.1 Prepare for decommissioning	60
9.2 Short-term decommissioning (within one month)	60
9.3 Long-term decommissioning (over one month)	60

10 Transport and storage 61

10.1 Transport	61
10.2 Storage	61
10.3 Recommissioning after prolonged periods of storage or non-use	61

11 Disposal 62

1. For your safety

1.1 Proper use

1.1.1 Coffee machine

1. The X6 series are commercial machines for preparing drinks and are intended for use in food services, offices, hotel, convenience store and other similar environments.
2. The X6 series are designed to process whole coffee beans, chocolate powder, milk powder and fresh milk.
3. The X6 series are intended for operation indoors but are not suitable for use outdoors.

1.2 Prerequisites for using the coffee machine

1. The X6 series are intended for use only by trained personnel.
2. Do not operate the X6 series or add-on units until you have completely read and understood relative description.
3. Self-service coffee machines must always be monitored to protect the users.
4. Do not use the X6 series or add-on units if you are not familiar with the various functions.
5. Do not use the X6 series unless the machine or the add-on units have been cleaned or filled as intended.
6. Children under the age of 8 are not permitted to use the X6 series and the add-on units. After learning safe ways to use the machine and understanding the risks result from incorrect ways. Children over the age of 8 and persons with reduced physical, sensory, or mental capabilities or with inexperienced or lack knowledge in how to use the machine are permitted to use the X6 series under the continuous supervision.

1.3 Explanation of safety symbols

Observation of these safety instructions is imperative to ensure personal safety and the intactness of machine. Symbols and signal words indicate the level of hazards as follows:



WARNING

WARNING indicates a potential danger, if not avoided, will may result in death or moderate injury.



CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



NOTICE

NOTICE directs your attention to the risk of damage to machinery.

1.4 General safety concerns when using the coffee machine

Improper use of coffee machine can lead to potential danger during operation. To avoid personal injury and health hazard, please note following tips when using the coffee machine.



WARNING

Health hazard due to electrical shock

1. Damaged power cords, lines or plug connections can lead to electrocution.
2. Do not connect any damaged power cords, lines or plug connections to the power supply.
3. Ensure that the machine and the power cord are not near any hot surfaces such as gas or electric stoves or ovens.
4. Ensure that the power cord is not pinched and does not chafe on sharp edges.
5. Immerse power plug in water or other liquids are not allowed, as well as pouring water or other liquids on the power plug. Power plug must be dry.
6. Repairs or servicing improperly performed on electrical systems can lead to electrocution.
7. Have servicing work carried out by authorized persons with corresponding qualifications only.



WARNING

Danger of suffocation

1. Plastic packaging materials could cause children to suffocate.
2. Ensure that children and persons with reduced physical, sensory, or mental capabilities have no access to plastic packaging materials.



CAUTION

Risk of scalding

1. Hot liquids and steam escape during cleaning and can lead to scalding. Keep hands away from the spouts and nozzles during this process.
2. Do not put anything on the drip grid.
3. Use only suitable drinking vessels.
4. Always be careful with hot drinks.
5. IN CASE OF SCALDING: Immediately cool the affected area and consult a doctor, depending on the severity of the injury.



CAUTION

Risk of injury

1. If objects drop into the grinder, splinters may be ejected, leading to injury.
2. Never put any objects into the grinder.



CAUTION

Cutting injuries/crushing

1. Active components in the interior of coffee machine will hurt fingers or hands.
2. Remember to switch off coffee machine and unplug the power supply before remove grinder or reach into brew module.



CAUTION

Irritation from cleaning agent

1. Cleaning tablets, milk system cleaning agent, and descaling agent can lead to irritations.
2. Observe the hazard warnings on the label of the respective cleaner.
3. Avoid contact with your eyes and skin.
4. Wash your hands after contact with cleaning agent. Consult a doctor if necessary.
5. Cleaning agent must not find their way into drinks.



CAUTION

Health hazard due to germ formation

1. Inadequate cleaning can result in food residues accumulating in the machine and at the nozzle, thereby contaminating products.
2. Do not use the machine unless it has been cleaned according to the instructions.
3. Clean the machine daily in accordance with the instructions.
4. Inform operating personnel of the necessary cleaning measures.
5. If the machine is not used for extended periods, residue may accumulate. cleaning the machine before using.
6. Using a water filter for too long can lead to the build-up of algae. Replace the water filter when prompted to do so by the machine.
7. Coffee beans, powder and fresh milk must in the expiration date.

2. Description of machine

2.1 Machine overview


The X6 series coffee machines are available with numerous options. A sample configuration is illustrated here. Please note that your coffee machine may look different from the configuration shown here.



Open the operation panel



Rear of machine

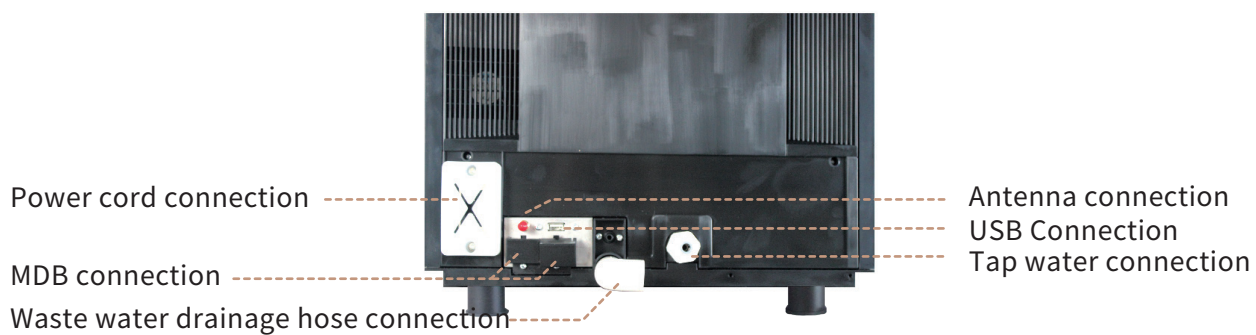

2.2 Screen interface

X6 series are available with three different kinds of user operation, interface, standard, self-service and professional interface, to satisfy the needs of different scenarios. See [page 41](#) for specific way of interface switchover.

2.2.1 Standard interface



Touching 'Member' icon can start up member function setting

Standard interface is designed to use for non-professional operator or professional personnel. Member function can be performed on the upper right of screen.

2.2.2 Self-service interface



Select language quickly here (four different languages are available)












Specially designed to use in self-service scenarios breakfast store and hotel. User can select language from upper-right corner of screen quickly without access to the menu.

2.2.3 Professional interface







Generally used in commercial scenarios, and the machine needs to assign with professional operating personnel to use. Continue to order is available in this interface.

2.2.4 Symbols on the screen







Symbol	Name	Description
	Member	Access to membership setting
Logo	Logo	Access to the menu setting
	scroller	Tips for drinking pages and current page
	Add	Add drinks
	Close	Close current page
	Alert	View the exception message
	Boiler temperature	Display boiler temperature
	Thermoblock temperature	Display thermoblock temperature
	Brew unit position	Display operation status of current brew unit
	Error message	Display error message appeared on the current machine
	Water-flow	Display current water-flow velocity, unit: ml/s
	Inactive	Drink is ' inactive ' and cannot be prepared

2.2.5 Symbols in the menu setting

Symbol	Name	Description
	Exit	Return to main page. Need to input PIN code to access to the menu again
	Main page	Return to main page. Do not need to input PIN code to access to the menu again
	Selection	The item is selected or activated
	Edit	Edit this item is permitted

2.3 Scope of delivery

The scope of delivery may vary, depending on the device configuration

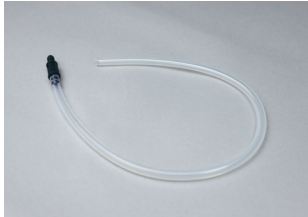Part	Picture	Quantity
Tap water connection pipe		1
Tap water connector		2
Waste water drainage hose		1
Key		1
Milk pipe		1
User manual		1

2.4 Technical data

Screen dimensions	10.1 Inches
Boiler capacity	0.7 liters
Water tank capacity	4 liters
Drip tray capacity	2 liters
Grounds container capacity	45 pieces
Coffee spout height	Height 1=100 millimeters Height 2=160 millimeters
Permissible Water pressure	0.5~6 bar
Left bean hopper capacity	1200g
Right bean hopper capacity	1200g
Powder hopper capacity	1500g
Right powder hopper capacity	/
Power supply type	220-240V 50/60Hz
Power rating	2500W
Machine Dimensions	560mmx380mm×690mm
Net weight	30Kg
Noise value	< 70 dB

3. Installation

3.1 Installation tips

1. Only an instructed service-engineer may install the machine.
2. The manufacturer is not liable for injuries caused by an improper mounting of the unit.
3. Installation must use original accessory.
4. Installation personnel will carry out the initial commissioning process for your coffee machine and walk you through the basic functions.






Please contact customer service for further support if you have any questions

3.2 Dimensions

Dimension unit: millimeter

optional area for connections through counter
breakthrough fresh water, power, waste water
hole $\varnothing 60\text{mm}$

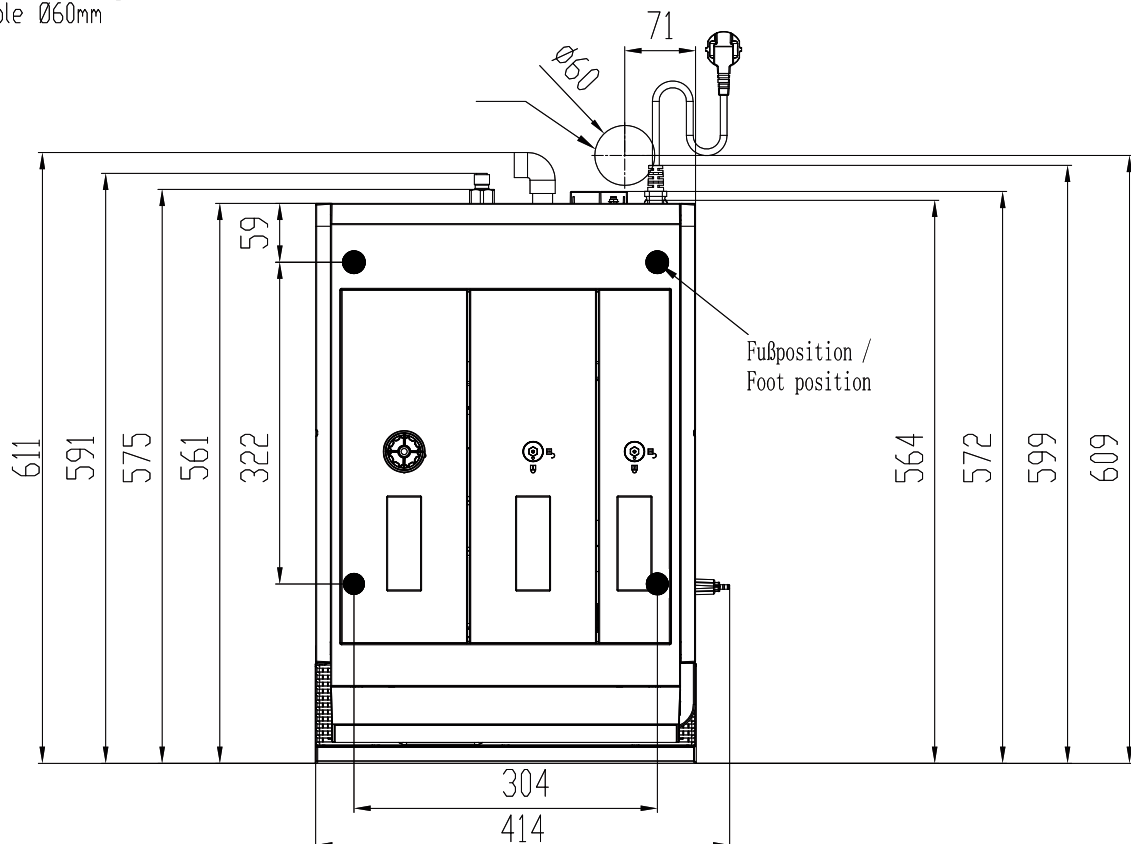

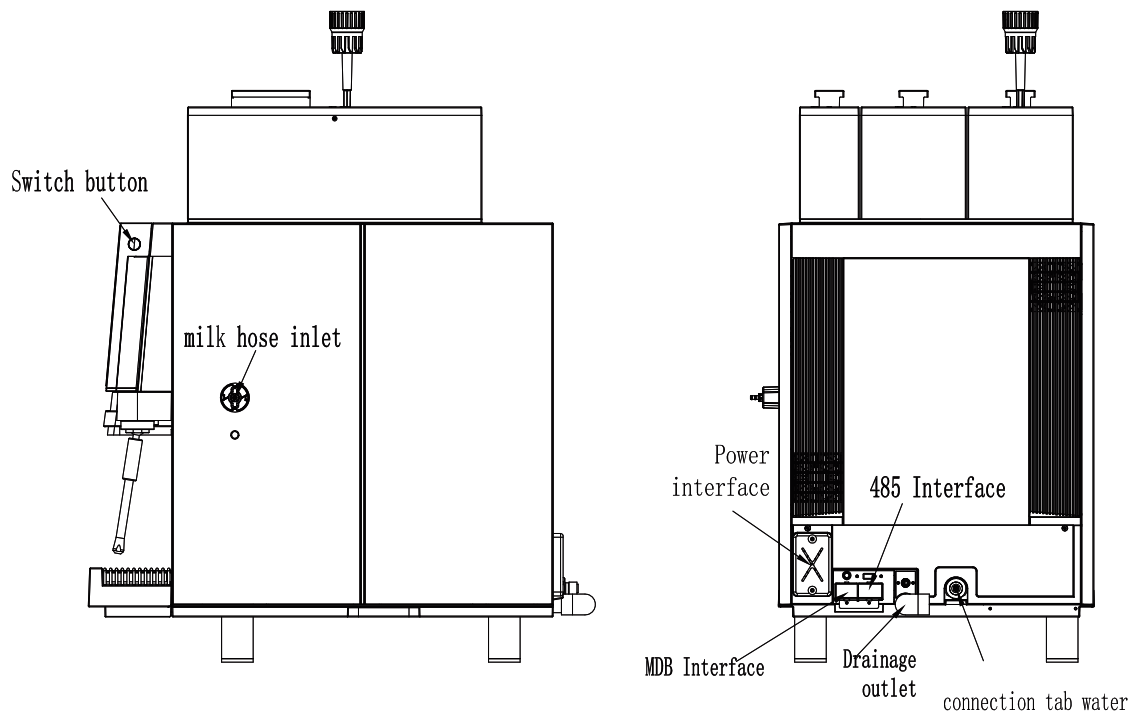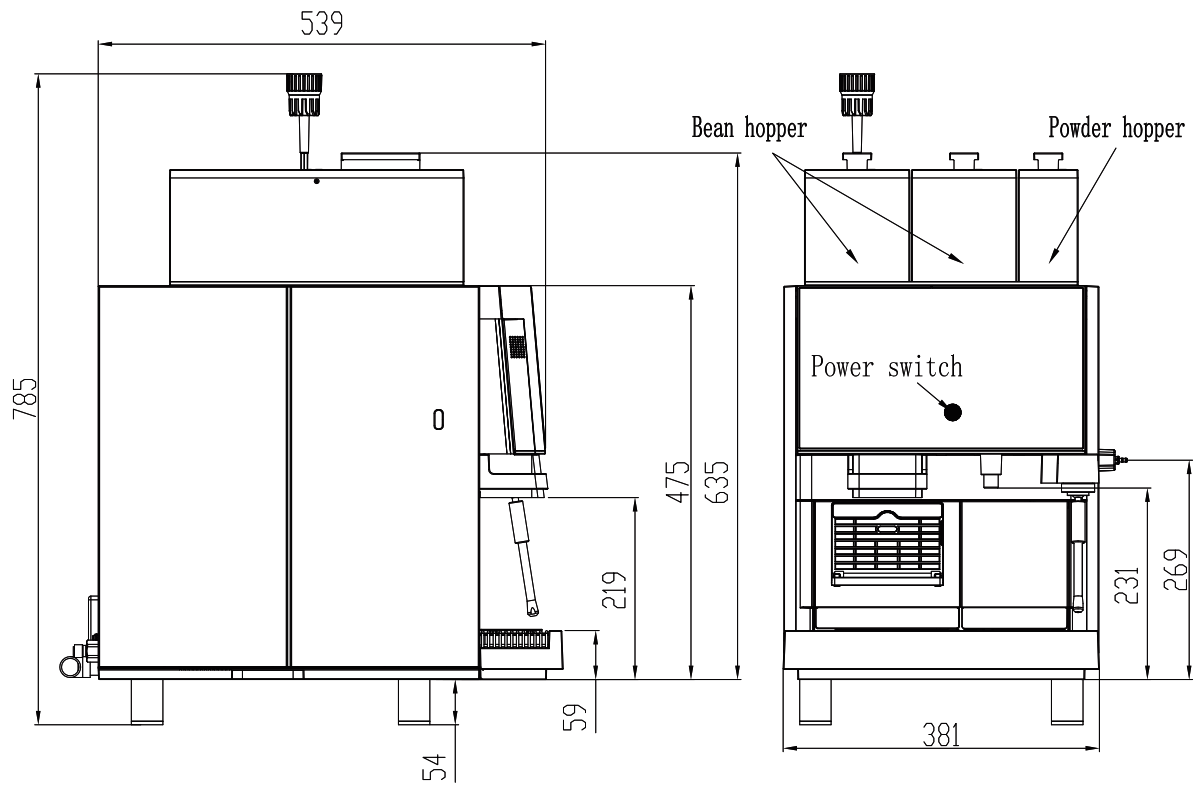

3.3 Installation location

1. The installation location must be dry and protected against water spray
2. Some condensate, water, or steam can always be discharged from a coffee machine
3. Do not use the coffee machine outdoors.
4. The machine has to be installed on a solid, level and heat-resistant base.
5. The surrounding temperature must be between 5°C~35°C.

3.4 Electrical connection

1. The mains connection must correspond with the voltage, amperage and frequency indicated on the machine label.
Installation of wrong or improper electric plugs can cause short circuit resulting in fire. The plug has to be selected and installed by qualified service personnel only.
2. The X6 series are electrically safe only when properly earthed as described in the current electrical safety specifications. Check for compliance and, when in doubt, have the wiring thoroughly inspected by skilled personnel.
3. The manufacturer does not take any responsibility for any damage caused by incorrect earthing or improper use of power supply .
4. No action needed from users to shift the product between 50 and 60Hz, product can adapt itself for both 50 and 60 Hz.

3.5 Water supply connection

Tank water supply, tap water supply and barreled water supply are available for the X6 series. Tank water supply and tap water supply are the standard configurations when the factory setting has been finished. Default water supply is water tank.

3.5.1 Water quality

Total hardness:	4 – 8 dH GH
	70 – 140 ppm (mg/l)
Carbonate hardness	3–6 dH KH / 50–105 ppm (mg/l)
Acid content/pH value	6.5–7.5 pH
Chlorine content	< 25 mg/l
TDS	30 – 150 ppm (mg/l)
electric conductivity	50–200 µS/cm (microsiemens)
Iron content	< 0.3 mg/l

To guarantee the required water quality, a water filter system needs to be installed

3.5.2 Tap water connection

The distance between the machine and the water connection should not be more than 1 meter (to connect the appliance, use the supplied original hose only). The water pressure must be between 2-6bar. If the water pressure is more than 6 bar, a pressure reducing valve must be installed.

3.5.3 Barreled water supply connection

Barreled water supply connection needs to use accessories supplied with factory. Please contact customer service for help if need to use barreled water function.

3.5.4 Automatic waste water drainage connection

The distance between the water drain and the machine should not be more than 1 meter. For proper draining, make sure that the water drain (hose) does not sag.

4. Start-up for the first time

4.1 Material filling


Adding material into the machine. See **page16** for specific operation.



Please use water tank supply for first time use

4.2 Initially start-up program setting

After switch on the machine initially, access to the setting of start-up program for the first time is available. Specific process as follows:

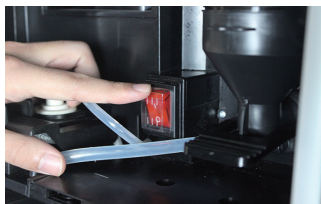


1. Lift the front operation panel and press the power switch




2. Press the screen power button




3. Screen is on

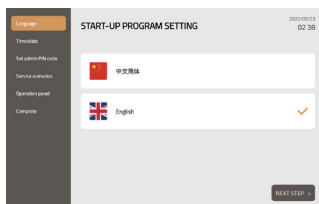


4. Select language

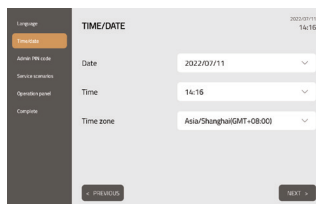


5. Set time and date

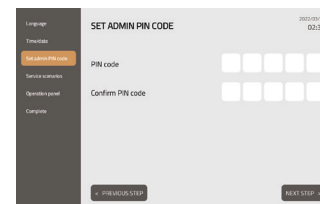


6. Set PIN code

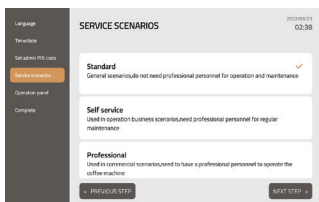

7. Select screen interface

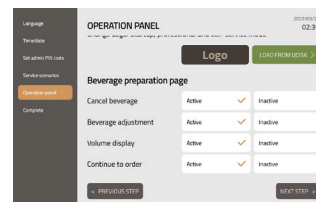


8. Set the panel display

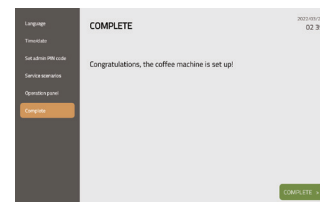

9. Click 'complete' to finish the setting

5. Operation

5.1 Coffee beans filling

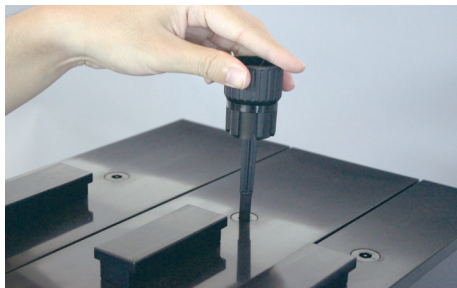

1. Use the key to unlock bean hopper lid (if need)



2. Lift bean hopper lid



3. Add coffee beans



4. Attach lid and lock it (if need)




Never put any objects into the bean hopper or grinder. Otherwise, splinters may be ejected, leading to injury.



1. Be careful with filling coffee beans, avoid falling into the gap between bean hoppers.
2. Do not pour ground coffee into bean hopper
3. Do not pour any liquids into bean hopper

5.2 Powder filling

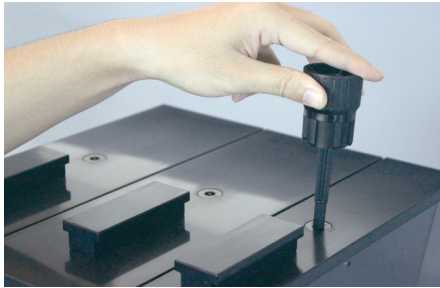

1. Use the key to unlock powder hopper lid (if need)



2. Lift powder hopper lid



3. Fill in suitable powder for fully automatic coffee machine.




4. Attach lid and lock it (if need)




- 1. Do not pour ground coffee into powder hopper.
- 2. Do not pour any liquids into powder hopper.


5.3 Water tank filling

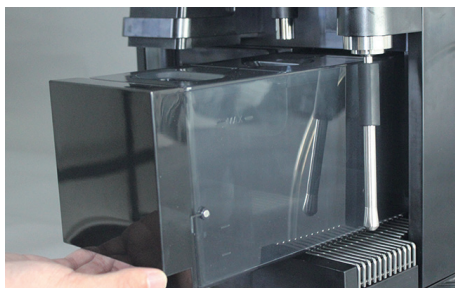

1. Pull out the water tank

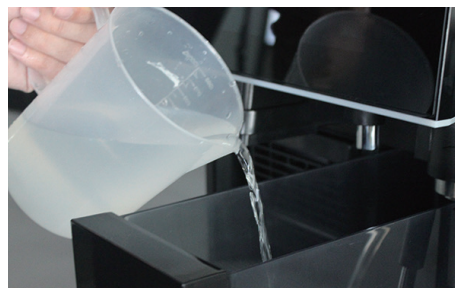

2. Fill water tank with drinking water

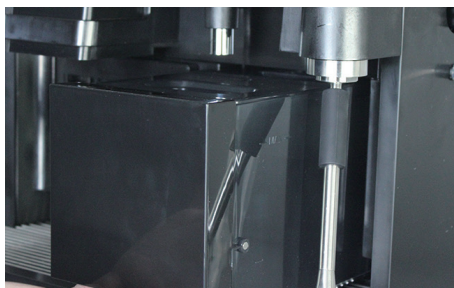

3. Attach water tank (Ensure water tank is installed in position)



- 1. Surface of water can not over the maximum marking identification of water tank
- 2. Do not fill the water tank with hot water, which may damage machine.

5.4 Milk connection



1. Connect milk pipe to machine



2. Insert the milk pipe into the milk container




Store milk in a cooler


5.5 Empty bean hopper



1. Use the key to unlock the operation panel (if need)

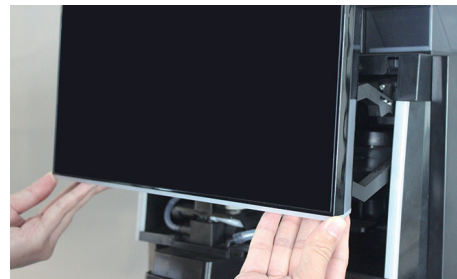

2. Lift the front operation panel

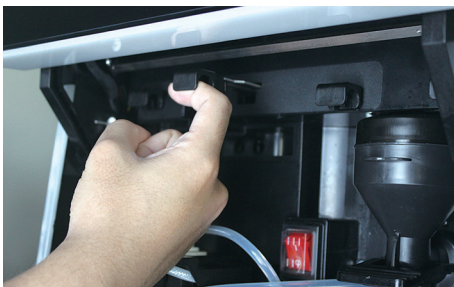


3. Pull the locking slide towards the front as possible




4. Remove bean hopper upwards



5. Empty and dry the bean hopper

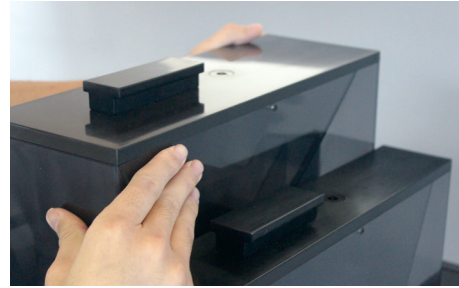

6. Attach the bean hopper

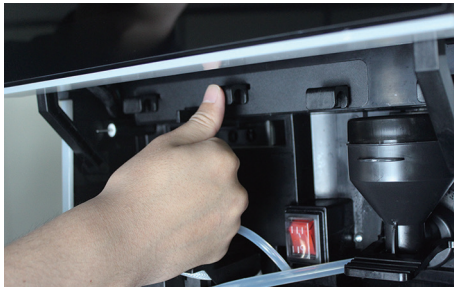

7. Push the locking slide all the way in



Must guarantee the totally dry after cleaning bean hopper, then place it back




Pay attention to the position of screen during the operation!
Carelessly touch may lead to the falling of screen and may cause the crush hazard of arm or finger.


5.6 Empty powder hopper




1. Use the key to unlock the operation panel (if need)

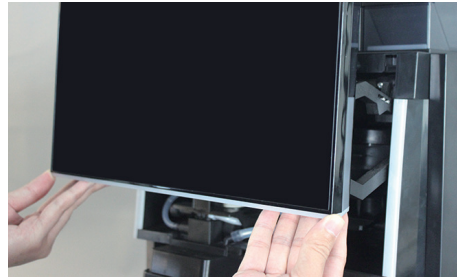

2. Lift the front operation panel

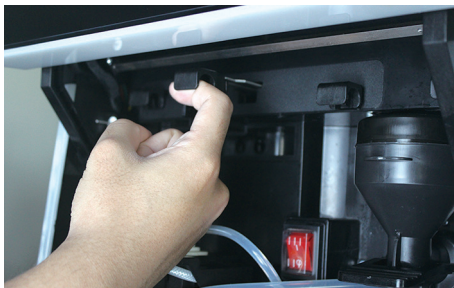

3. Pull the locking slide towards the forward if possible

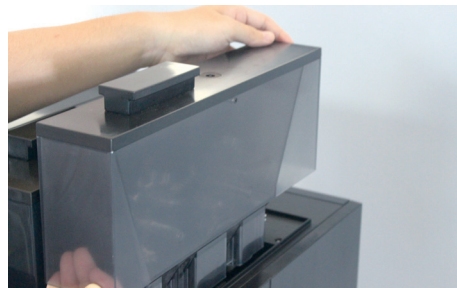


4. Remove the powder hopper upwards



5. Empty and dry the powder hopper



6. Attach the powder hopper

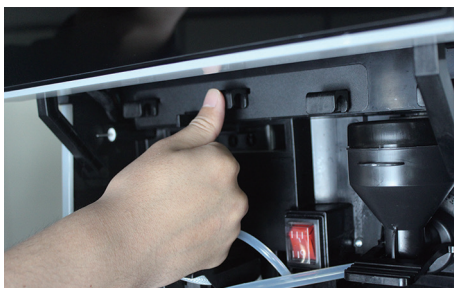


7. Push the locking slide all the way in



Must guarantee the powder hopper totally dry before place it back.

5.7 Switch on machine

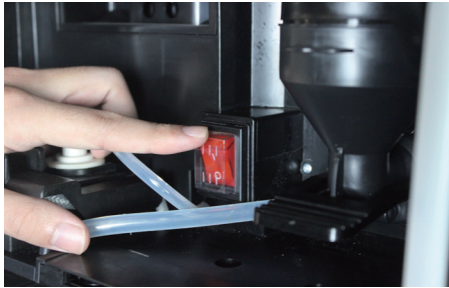

Process of switch on the machine please see **page 15** start-up for the first time/start-up program.



Pay attention to the position of screen during the operation!
Carelessly touch may lead to the falling of screen and may cause the crush hazard of arm or finger.

5.8 Beverage preparation

5.8.1 Beverage preparation in standard interface




1. Place an appropriate cup under the beverage outlet



2. Touch beverage icon

3. Beverage in preparing

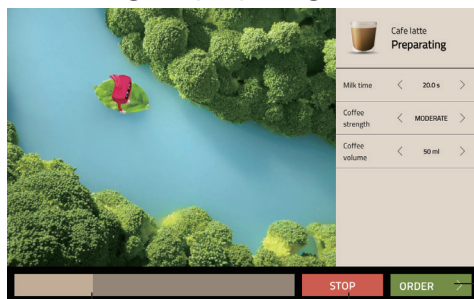

Touch '<' '>' can change parameter during the beverage preparation

Touch 'Order' to select another desired beverage

Cancel beverage preparation by touching 'Stop'

Process bar

5.8.2 Beverage preparation in 'self-service' interface




1. Place an appropriate cup under the beverage outlet



2. Touch beverage icon

3. Beverage in preparing

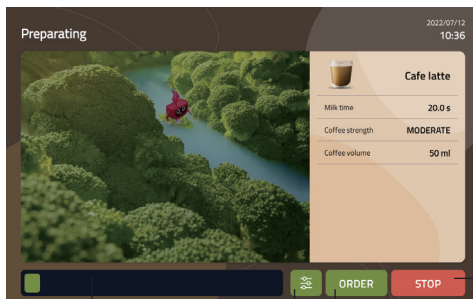

Process bar

Cancel beverage preparation by touching **'Stop'**



Touch **'Order'** to select another desired beverage



Change parameter during the beverage preparation

5.8.3 Beverage preparation in 'professional' interface



1. Place an appropriate cup under the beverage outlet



2. Touch latte icon

3. Beverage in preparing



Process bar

Cancel beverage preparation

4. Queuing function can be used when beverage in preparation

Touch espresso beverage icon when preparing cafe latte, espresso will be displayed in the queuing list as below.




5.9 Steam output(Optional)

Steam wand is suitable for manually heating and foaming of milk and also applies to heat other drinks



1. Hold a suitable container under the steam spout

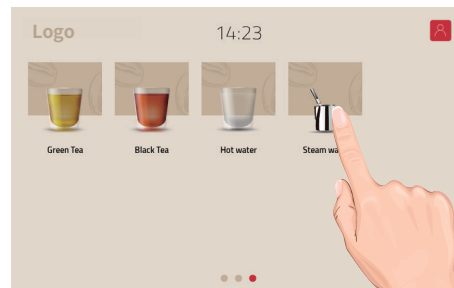

2. Touch steam icon and starts dispensing steam



3. Steam is releasing



4. Wipe the steam wand with a damp cloth after use



Touch steam icon, some steam will be released to help for cleaning nozzle and preventing it from clogging

5.10 Grinding coarseness setting


Grinding coarseness could be calibrated by using calibration program. Contact your customer service for the help.

6. Program setting


6.1 Access to the menu



1. Touch logo icon on the upper-left corner

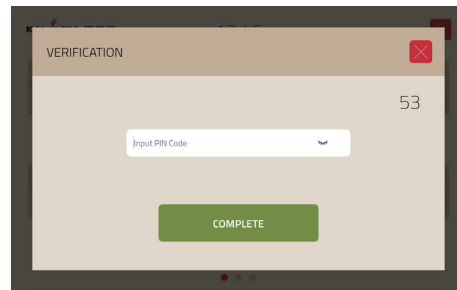

2. Input PIN code and touch complete

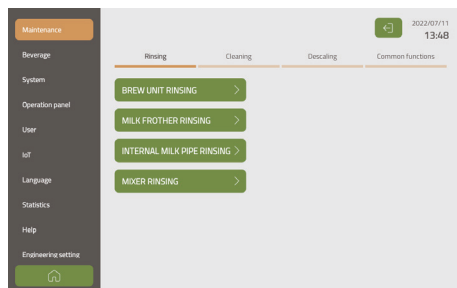


3. Select the target menu




1. PIN codes can be set in the start-up program for the first time. If PIN codes are not be set, the default codes are empty
2. Enter different PIN codes can obtain different menu rights. Specific setting of PIN codes' rights assignment can see user rights can be checked and changed in the menu of System setting/user/maintenance rights

6.2 Program setting menu tree

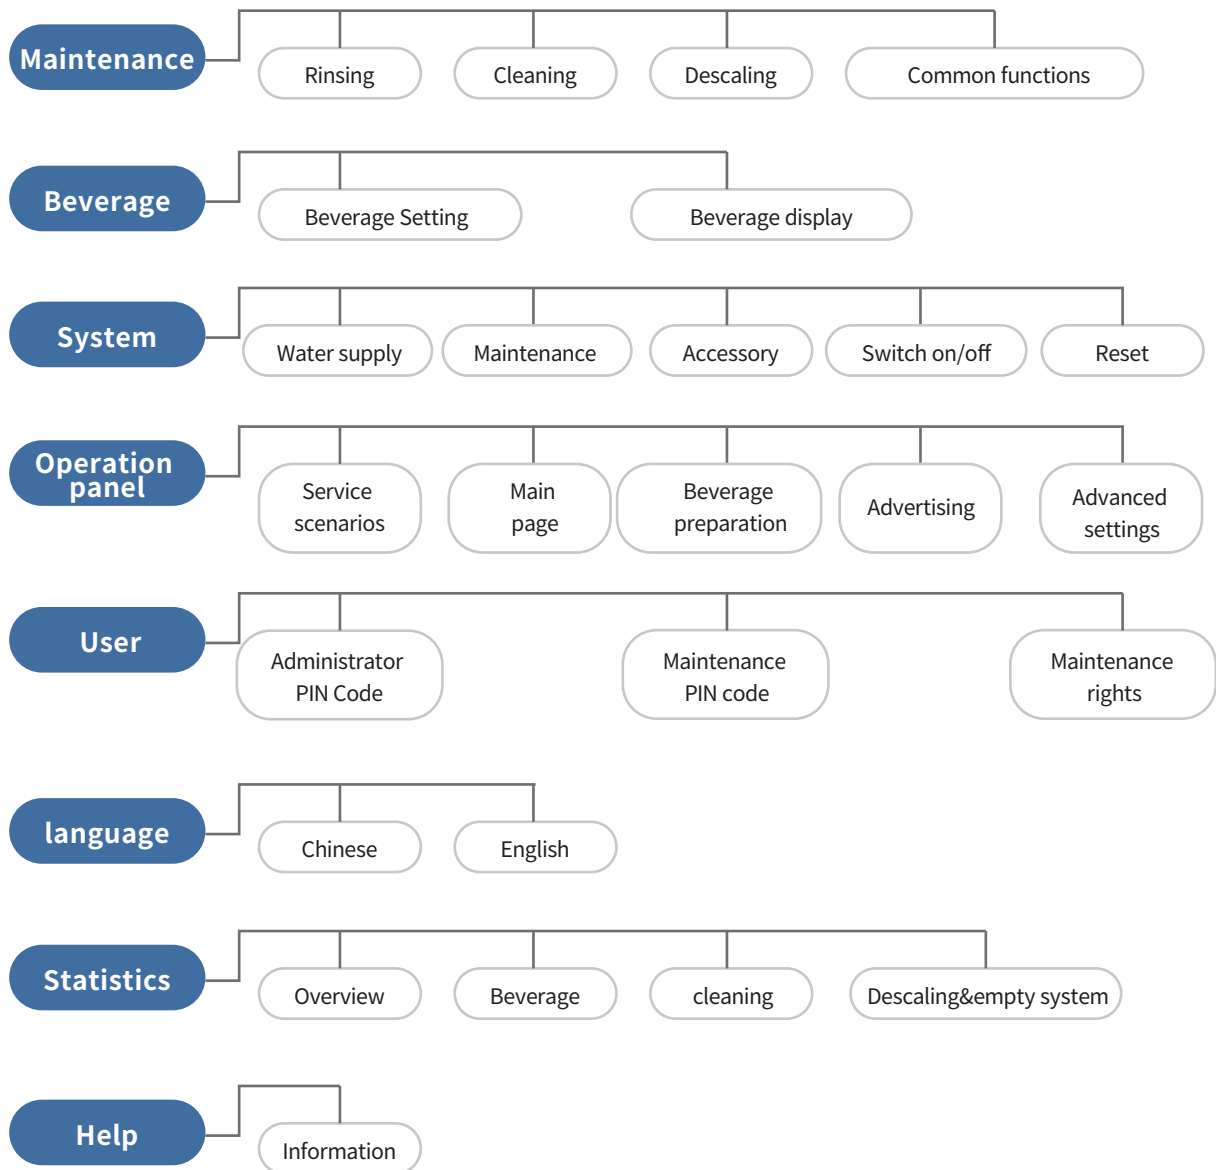


6.3 Maintenance

6.3.1 Overview of cleaning menu

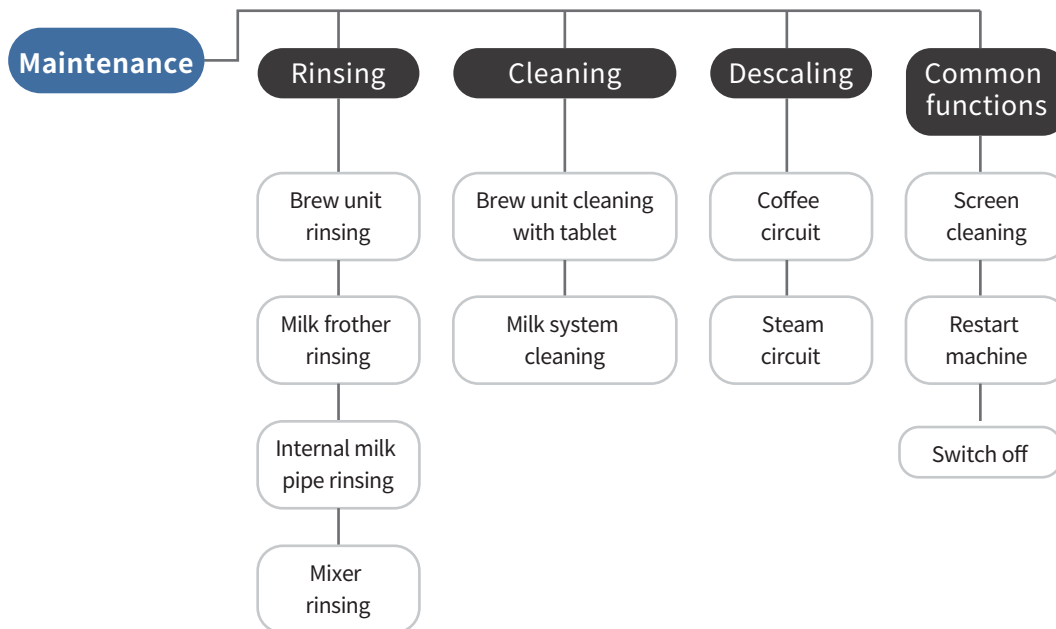

6.3.2 Rinsing

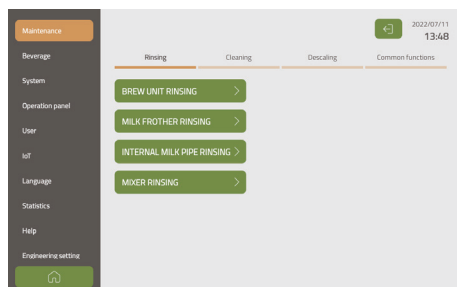

Brew unit rinsing

Immediately carry out hot rinsing of brewing system after tapping it.

Milk frother rinsing

Immediately carry out hot rinsing of milk frother after tapping it.


Internal milk pipe rinsing

Immediately carry out hot rinsing of milk pipe after tapping it.

Mixer rinsing

Immediately carry out hot rinsing of mixer after tapping it.

6.3.3 Cleaning

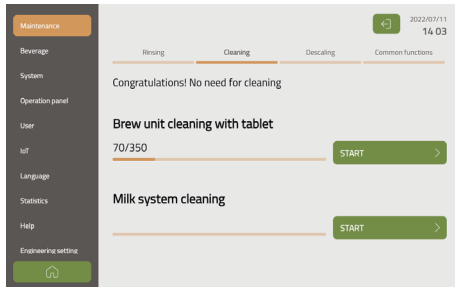

Cleaning brew unit

Immediately carry out tablets cleaning program of brew unit after tapping start, if the message of '**brew unit cleaning with cleaning tablets**' appears on the screen. Cleaning tablets are needed in the process of cleaning. Total duration is approx. 20 minutes.

Cleaning milk system

Immediately carry out cleaning process of cleaning milk system after tapping start. Cleaning agent are needed in the process of cleaning. Total duration is approx. 10 minutes.

6.3.4 Descaling



Coffee circuit


Start the program of descaling-coffee waterway after tapping the option, if the message of '**Coffee circuit**' appears on the screen. Descaling powder is used in the process of descaling. Total duration is approx. 50 minutes.



Steam circuit


Start the program of steam waterway descaling after tapping the option, if the message of '**Steam circuit**' appears on the screen. Descaling detergent is used in the process of descaling. Total duration is approx. 50 minutes.

6.3.5 Common function

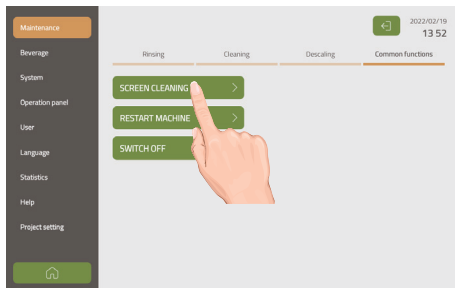

Screen cleaning

Machine will be locked for 15 seconds after tapping '**Screen cleaning**'. Now use a cloth to clean the surface of screen.

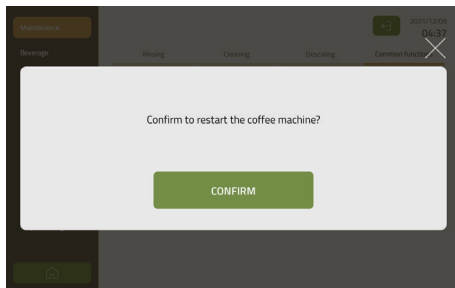


Restart machine


Restart machine system after tapping '**Restart**'.

6.4 Beverage

6.4.1 Beverage setting overview

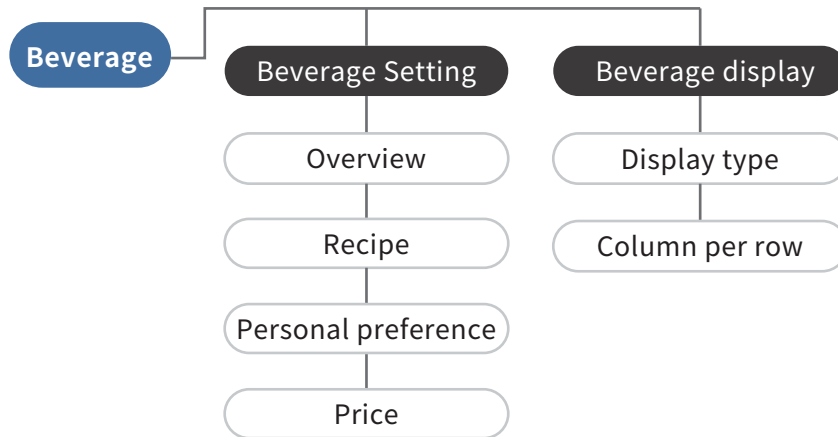


6.4.2 Beverage Settings

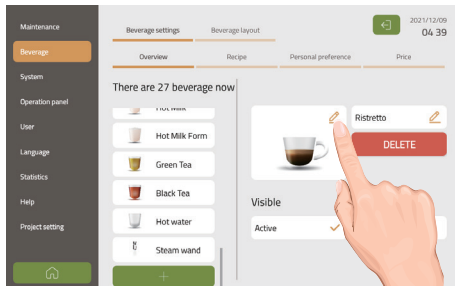

Enter 'Overview' settings

1. Change beverage icon

Change beverage icon after tapping edit icon. Image uploaded from USB stick can be used as beverage icon.

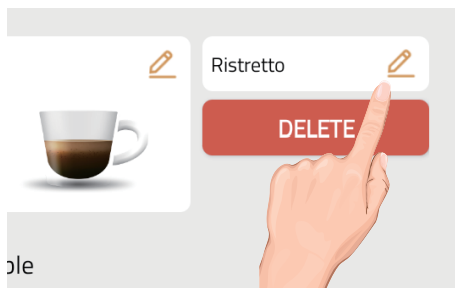


2. Change beverage name

Change beverage name after tapping edit icon. Input method can be used to input new name of beverage




3. Beverage status

Select '**Active**' can prepare this beverage. Select '**Inactive**', the beverage will be locked and cannot be prepared.

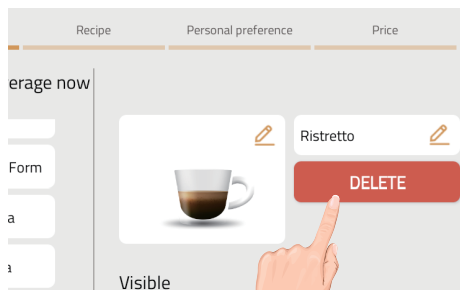

4. Delete the beverage

Tap '**Delete**' key beneath beverage will delete the beverage from beverage list.

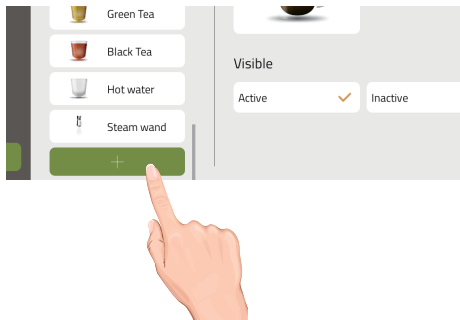


5. Add new beverage

Tap '**Add**' that you can select new drink that you want to add from popup list. Change and define name and icon of new beverage after adding new drink into menu list.


Recipe setting

Take Latte for example, after touching latte beverage symbol you will be able to access to recipe page, beverage parameter setting modification is permitted.

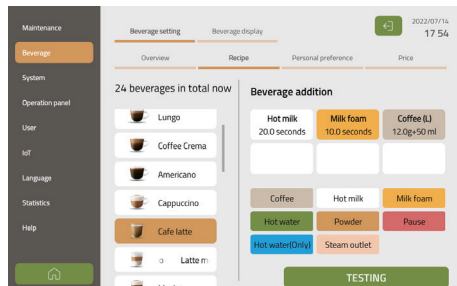


Check current recipe

The order from left to right is the sequential order of beverage flowing out: Hot milk-Hot milk foam-Coffee.

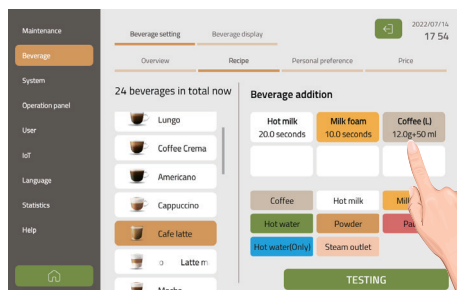


Change recipe order

press recipe icon (e.g. coffee) and dragging it to change its position.

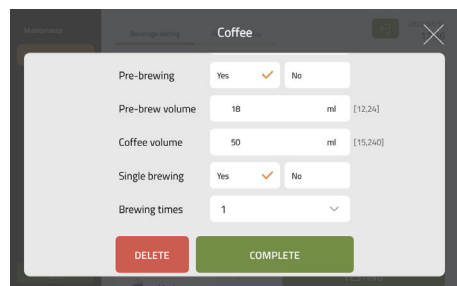


Change recipe parameters

Tap recipe, change recipe parameter is permitted. Specific settable value range needs to comply with limited condition of software.

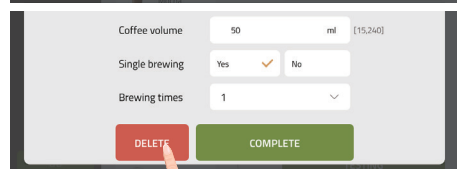

Delete recipe

Access to recipe page and tapping 'Delete' button.

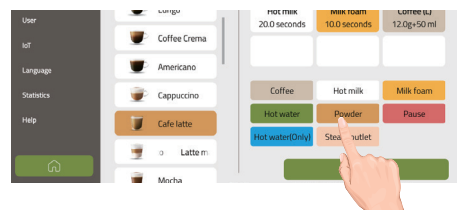

Add recipe

1. Factory additions list appears here. The recipe will pop up to beverage recipe composition list automatically after tapping it.
2. The range of beverages addable recipe: 1~6.
3. Specific settable value range needs to comply with the limited conditions of software.
4. Every settable recipe parameter as shown the left image.

Addable recipe parameter

Coffee

Parameter	Value range	Remarks
Bean hopper	Left or right	Default: left
Powder weight	5~16g	Default:10g
Pre-brew volume	0~35ml	Default:0ml
Coffee quantity	15~240ml	Default:50ml
Single brewing	yes or no	Default: yes
Brewing times	1~4times	Default:1

Hot milk and milk foam

Parameter	Value range	Remarks
Milk container	Left or right	Default: left
Time	5~120seconds	Default: 10 seconds

Hot water

Parameter	Value range	Remarks
Water volume	25~450ml	Default: 150ml
Water temperature	High,Medium , Low,Cold	Default: High

Powder

Parameter	Value range	Remarks
Powder weight	0~32g	Default:20g
Water temperature	High,Medium , Low,Cold	Default: High

Hot water wand

Parameter	Value range	Remarks
Water volume	25~450ml	Default: 100ml
Water temperature	High,Medium Low,Cold	Default: High

Steam wand

Parameter	Value range	Remarks
Time	5~120seconds	Default: 10 seconds

Pause

Parameter	Value range	Remarks
Time	1~20seconds	Default: 5 seconds


Test

Tap 'test' to prepare the drink using the modified recipe after recipe setting is completed, and test if the drink can satisfy the expectation.

Personal preference

Option: Active Inactive

Default: Inactive

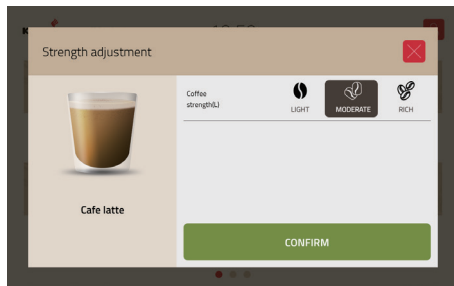

Strength adjustment function in standard mode is available after the personal preference is activated. The left interface pops up after touching the beverage icon.



Strength adjustment function in self service mode is available after the personal preference is activated. The left interface pops up after touching the beverage icon.



Cup size adjustment function in professional mode is available after the personal preference is activated. The left interface pops up after touching the beverage icon.


6.4.3 Beverage Display

Two modes of beverage display are available: grid layout and menu cards.

Grid layout



Menu cards

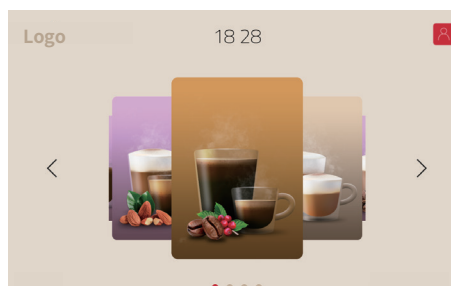

Grid layout

Grid layout parameter setting as follows:

Parameter	Value range	Remarks
Column per	1x1 2x1 3x1 4x1 5x1 3x2 4x2	Default: 4x2

Menu cards

Beverages in the beverage list can be sorted into different menu cards. Menu cards numbers: 2-7.


- 1.Touch the cover image of the menu card to replace it with a new one.New cover image can be selected from photo gallery and also can be loaded from USB stick;
- 2.Touch '**update the cover name**' can modify the cover name;
- 3.Touch second level, beverages in the beverage list can be selected and added into menu cards;
- 4.Effect of activating '**Display second level beverages in first page**' as following image.




Second level list

6.5 System

6.5.1 Overview of system menu

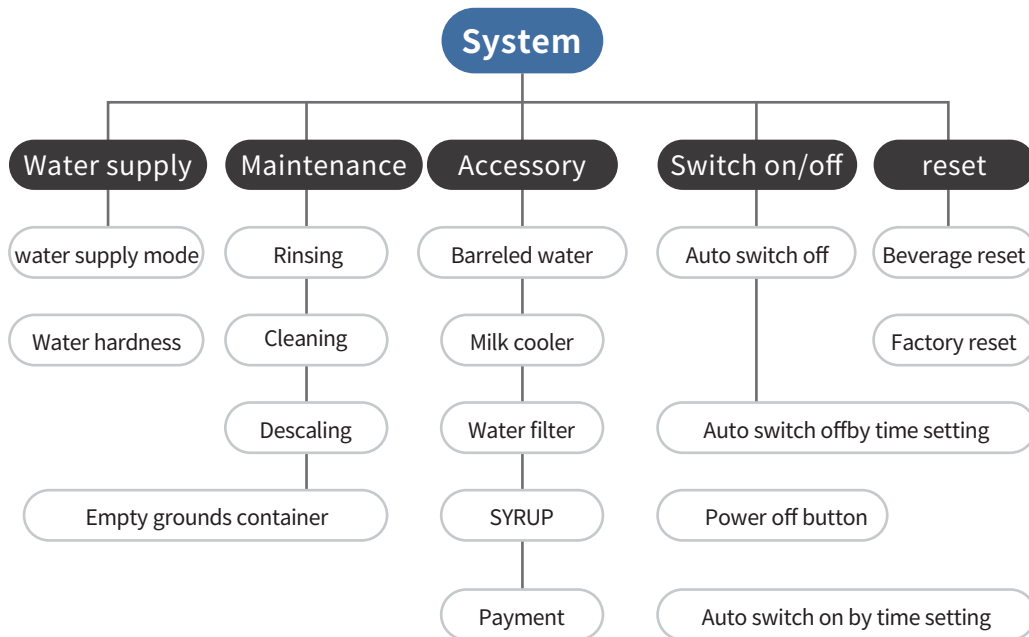

6.5.2 Water supply

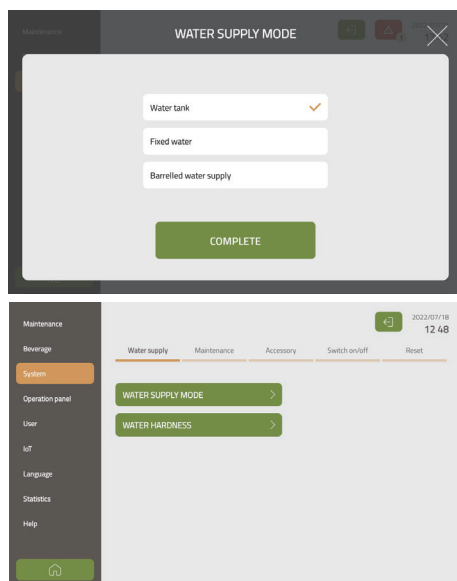

Water supply mode

Water tank supply and fixed water supply are available. Select corresponding water supply mode. Default setting is water tank supply.

Water hardness

Setting water hardness value for the machine here. Default setting: 5 dh.

6.5.3 Maintenance parameter setting

Rinsing

Rinsing parameter setting as below:

Parameter	Set range	Remarks
Warm-up rinsing	30 minutes 1~4 hours	Default: 30 minutes
Brew unit auto rinsing	Off 5~20 minutes	Default: Off
Milk frother auto rinsing	Off 5~20 minutes	Default: Off
Milk frother auto rinsing	Off 5~20 minutes	Default: Off

Cleaning

Parameter setting of brewing unit cleaning with tablets as below:


Parameter	Set range	Remarks
Brewing unit cleaning with tablets warning cups	≥ 0 cup	Default: 350 cups
Compulsory brew unit cleaning with tablets warning cups	≥ 0 cup	Default: 450 cups

Descaling

Water hardness, water flow and water filter installation or not, which determine the liter and time remaining before descaling. Parameter setting of descaling as below:

Parameter	Set range	Remarks
Coffee waterway descaling	≥ 0 liter	Default: 2500 liters
Coffee waterway compulsory descaling warning	≥ 0 liter	Default: 3600 liters
Steam waterway descaling	≥ 0 seconds	Default: 18880 seconds
Steam waterway compulsory descaling warning	≥ 0 seconds	Default: 25160 seconds


Empty grounds container

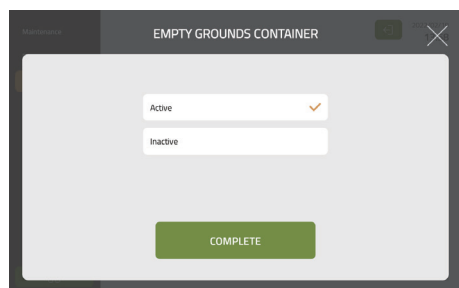

1. Select '**active**', '**empty grounds container**' will be displayed on the screen after 45 coffees preparation;
2. Select '**Inactive**', '**empty grounds container**' will be not displayed on the screen.


6.5.4 Accessories

Barreled water

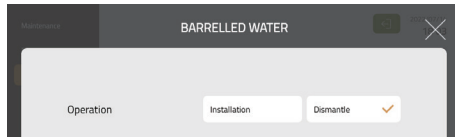


1. Select '**Dismantle**' if the machine isn't connected water barrel;
2. Select '**Installation**' here, then tap "**complete**" if the water barrel needs to use, and machine will restart to complete settings.
3. Default setting: '**Dismantle**'.

Milk cooler

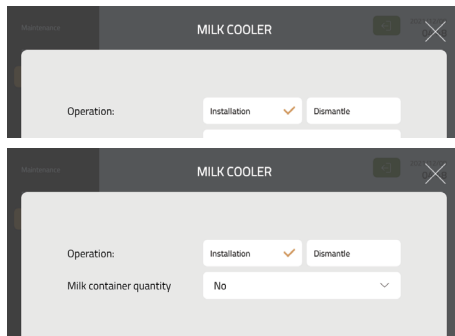


1. Select '**Dismantle**' if the machine isn't connecting the milk cooler;
2. Select '**Installation**' if use milk cooler. Also set milk container quantity in the milk cooler.

Water filter

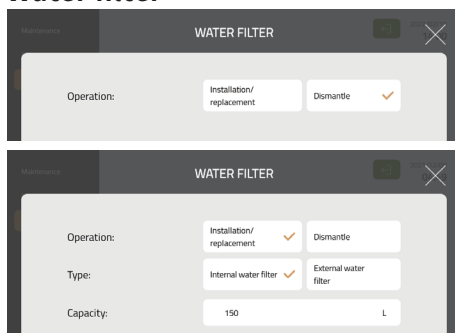

1. Select '**Dismantle**' if not install the water filter;
2. Select '**Installation/Replacement**' here if install or replace filter cartridge. Select the type of filter cartridge and input capacity is needed here.
3. Default setting: '**Dismantle**'

Syrup

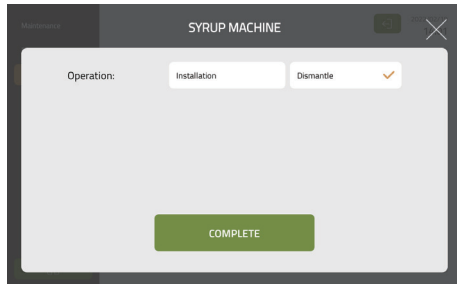


SYRUP MACHINE

Operation: Installation Dismantle ✓

COMPLETE

1. Select '**Dismantle**' if not use syrup.
2. Select '**Installation**' here if use syrup. Select syrups quantity here
3. Default setting: '**Dismantle**'.

Payment Device

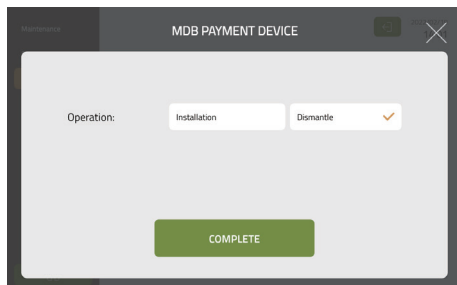


MDB PAYMENT DEVICE

Operation: Installation Dismantle ✓

COMPLETE

RFID、MDB and POS payment options are available for X4 series

1. Firstly, select the corresponding payment device, for example, '**MDB payment device**' ;
2. Select '**Installation**' and input the name of device

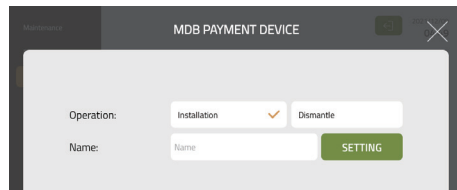

MDB PAYMENT DEVICE

Operation: Installation ✓ Dismantle

Name: Name SETTING






Setting here is only required when use accessories supplied by factory

6.5.5 Switch off

Auto switch off countdown

Setting the auto switch off countdown here, like auto switch off the machine in 8 hours.

Parameter	Set range	Remarks
Auto switch off countdown	1~24 hours Never switch off	Default: /

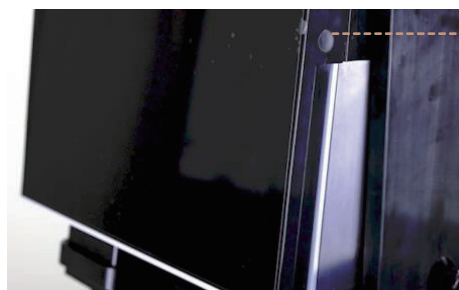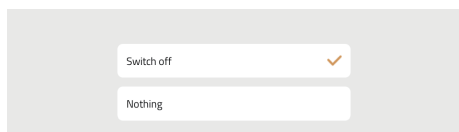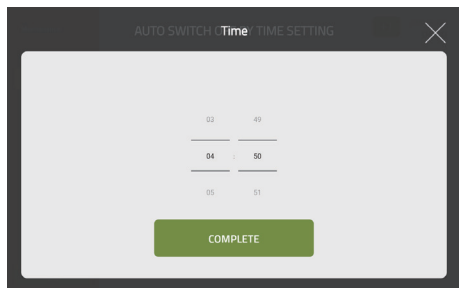

Auto switch off by time setting


Setting the time of auto switch off here, like 9:15 am.

Switch off button

1. Select '**switch off**', press power button lasts 3 seconds to turn off the screen.
2. Select '**Nothing**', the function of screen power switch is disabled.

Screen power switch

6.5.6 Reset

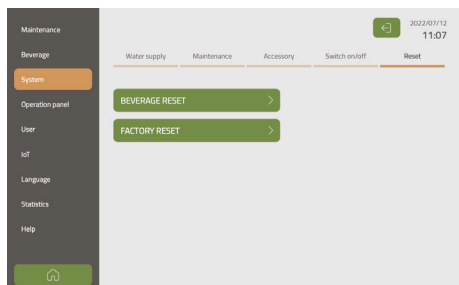

Beverage reset


Restore all relative parameter of beverage to factory default setting.

Factory reset

Restore all parameter of machine to factory default setting.

6.6 Operation panel

6.6.1 Service scenarios

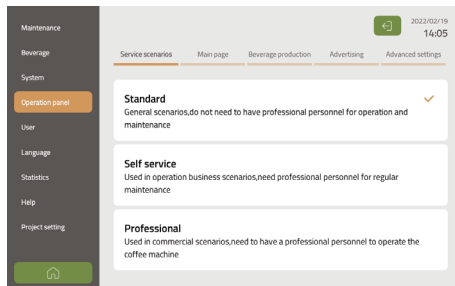

Select interface mode displayed on the screen. Specific introduction of each interface mode displayed on the screen see **page 7** .

6.6.2 Main page

Member function

Option: **Active** **Inactive**



1. Select '**Active**', tap membership key in the upper-right corner of screen, then create member and favorite drinks list.
2. Select '**Inactive**', membership key is not displayed.

Serial number


Option: **Active** **Inactive**



1. Select '**Active**', machine serial number is displayed in the lower left corner of screen.
2. Select '**Inactive**', machine serial number is not displayed.


Service call

Option: **Active** **Inactive**

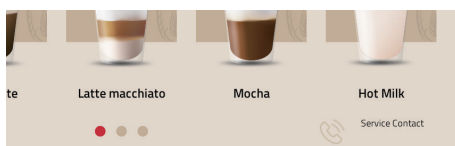

1. Select '**Active**', service call is displayed in the lower right corner of screen.
2. Select '**Inactive**', service call will not be displayed.

LOGO Change

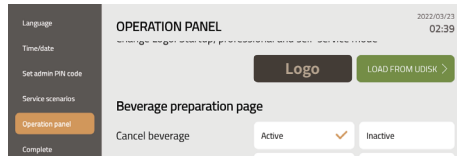

Touch edit key to change logo displayed on the screen. Load new Logo image from USB stick.




Backgrounds of LOGO image used in start-up page, professional mode and self-service mode are must be black

6.6.3 Beverage Preparation

Cancel beverage


Option: Active Inactive

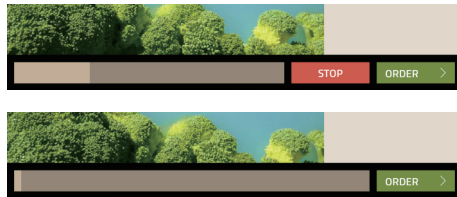

- 1.If select '**Active**' drink preparation can be canceled by touching '**stop**' .
2. Select '**Inactive**', '**stop**' will not be displayed.

Beverage adjustment


Option: Active Inactive

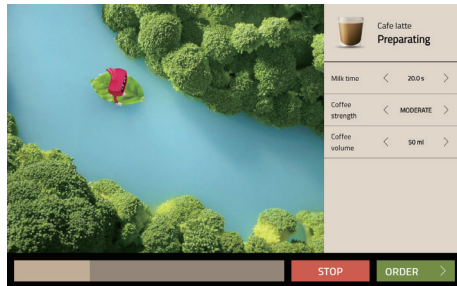

- 1.Select '**Active**', drink recipes could be adjusted by touching left and right key when the beverage is in production.
- 2.Select '**Inactive**', drink recipes could not be adjusted when the beverage is in production.

Volume display


Option: Active Inactive

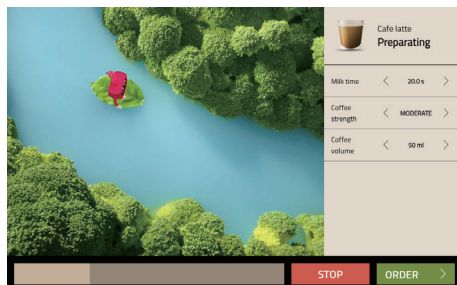

- 1.Select '**Active**', drink recipes will be displayed when the beverage is in production.
- 2.Select '**Inactive**', drink recipes will not be displayed when the beverage is in production.

Continue to order

Option: Active Inactive

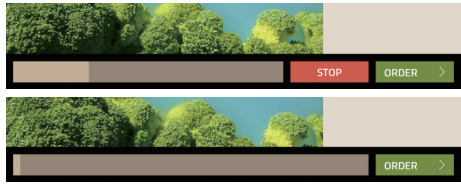

1. Select 'Active', touch 'order' to select next drink.
2. Select 'Inactive', 'Order' will not be displayed.

6.6.4 Advertising

AD - Standby

Set advertisement videos when the machine is in standby. Advertising resources could be loaded from USB stick.

Parameter	Set range	Remarks
Waiting time	0~100 seconds	Default: 60 seconds
Volume	0~100%	Default: 20%
Cycle type	Infinite loop ;	Default: Exit
Single image	Exit automatically after playing	automatically after playing
play time	0~100 seconds	Default: 10 seconds



Advertising setting is available here, videos and images used can be loaded from USB stick

AD - Welcome

Set advertisement videos when the machine is started.

Parameter	Set range	Remarks
Volume	0~100%	Default: 20%
Single image play time	0~100 seconds	Default: 5seconds



Video requirements: MP4 format, proportion16:9, recommended resolution ratio1280x800, Video bitrate less than 3000kbps and 100M, image format: PNG, JPG, JPEG, recommended resolution ratio1280x800

AD – Beverage in production


Set advertisement videos when the beverage is in production.

Parameter	Set range	Remarks
Volume	0~100%	Default:30%
Single image play time	0~100 seconds	Default: 5 seconds



Video requirements: MP4 format, proportion 4:3, recommended resolution ratio 890x700, Video bitrate less than 3000kbps and 100M, image format: PNG, JPG, JPEG, recommended resolution ratio: 890x700

6.6.5 Advanced settings

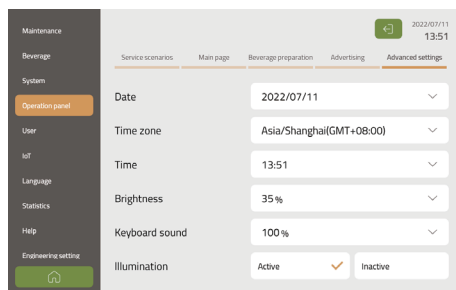

Date

Set local date

Time zone

Set local time zone

Time

Set local time

Brightness

Set brightness. Default: 60%

Keyboard sound


Set keyboard sound volume.
Default: 0%

Illumination


Active, Inactive

Illumination


Option: Active Inactive

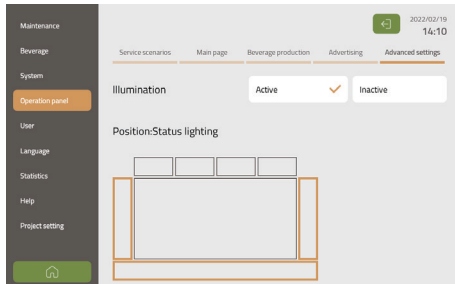


1. Select **'Active'**, screen, bean hoppers and powder hoppers are illuminated.

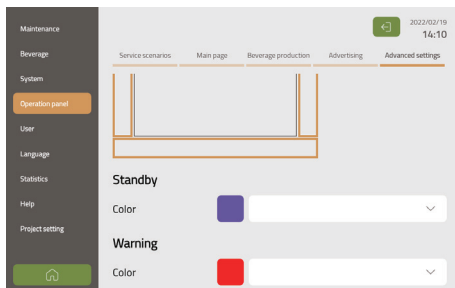


2. Touch desired position for illumination setting, for example touch the **'left bean hopper'** ;

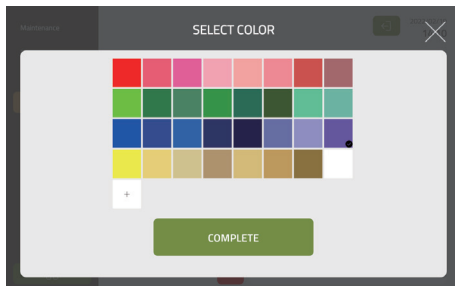

3. Enter the color menu to set the color for standby and alarm illumination. Select target color from preset various colors, shown as left image.

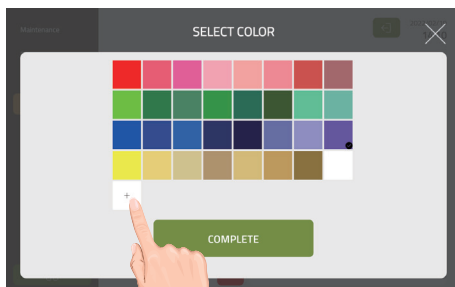

In addition, customization color can be set. Access to customization interface by touching '+'

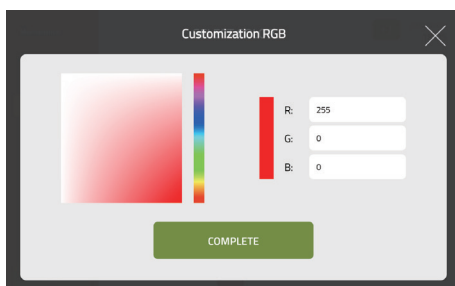

6.7 User

The screenshot shows the 'Maintenance rights' screen. At the top, there is a navigation bar with three tabs: 'Administrator PIN code', 'Maintenance PIN code', and 'Maintenance rights'. The 'Maintenance rights' tab is selected. Below the navigation bar, there are two input fields: 'New PIN code' and 'Confirm new PIN code'. Each field has a 5-digit numeric keypad. The top right corner of the screen displays the date '2022/02/19' and the time '14:11'.

Different user rights can be assigned with corresponding PIN code.

6.7.1 Administrator PIN Code

The screenshot shows the 'Administrator PIN code' screen. At the top, there is a navigation bar with three tabs: 'Administrator PIN code', 'Maintenance PIN code', and 'Maintenance rights'. The 'Administrator PIN code' tab is selected. Below the navigation bar, there are two input fields: 'New PIN code' and 'Confirm new PIN code'. Each field has a 5-digit numeric keypad. The top right corner of the screen displays the date '2022/02/19' and the time '14:11'.

Set admin PIN code, which is formed from 5 digits. Input correct pin code can view all rights of menu.

6.7.2 Maintenance PIN code

The screenshot shows the 'Maintenance PIN code' screen. At the top, there is a navigation bar with three tabs: 'Administrator PIN code', 'Maintenance PIN code', and 'Maintenance rights'. The 'Maintenance PIN code' tab is selected. Below the navigation bar, there are two input fields: 'New PIN code' and 'Confirm new PIN code'. Each field has a 4-digit numeric keypad. The top right corner of the screen displays the date '2021/12/09' and the time '06:32'.


Set maintenance PIN code here, which is formed from 4 digits. Input correct pin code can view assigned maintenance rights.

6.7.3 Maintenance rights

The screenshot shows the 'Maintenance rights' screen. At the top, there is a navigation bar with three tabs: 'Administrator PIN code', 'Maintenance PIN code', and 'Maintenance rights'. The 'Maintenance rights' tab is selected. Below the navigation bar, there is a section titled 'Maintenance' with two columns of buttons. The left column contains buttons for 'Rinsing', 'Descaling', and 'Common functions'. The right column contains buttons for 'Cleaning'. Below these buttons, there are several rows of maintenance functions, each with a checkmark indicating that the right is assigned. The functions are: 'Brew unit rinsing', 'Milk frother rinsing', 'Internal milk pipe rinsing', 'Mixer rinsing', 'Brew unit cleaning counter', 'Brew unit cleaning with tablet', and 'Milk system cleaning'. The top right corner of the screen displays the date '2022/07/18' and the time '16:26'.


Setting specific rights for maintenance PIN code here.

6.8 Language

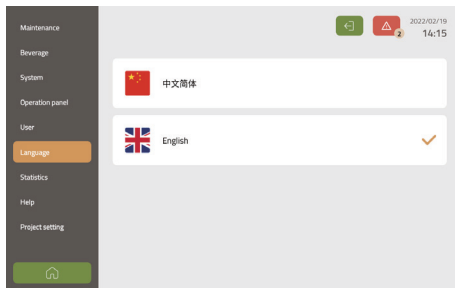


Display available languages here.
Select language.
Default language setting is English.

6.9 Statistics

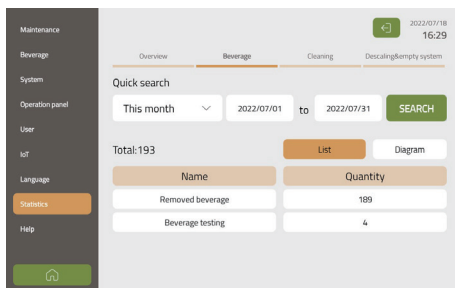

View the history records of various beverage preparation data, total drink numbers, care and maintain here.


6.9.1 Beverage

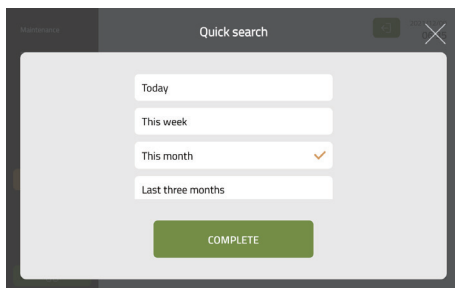

Quick search


Data can be viewed by 1 week, 1 month, 3 months, current date, half year, one year and all. View the data of certain time can be customized. The data could be presented in two ways: tables and graphs.

6.9.2 Cleaning

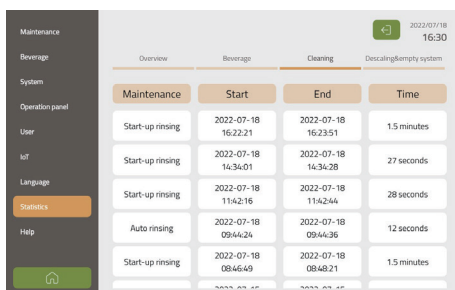

Specific time records of various cleaning items can be viewed here. Including the start time, ending time and duration time of cleaning items.

6.9.3 Descaling/empty system

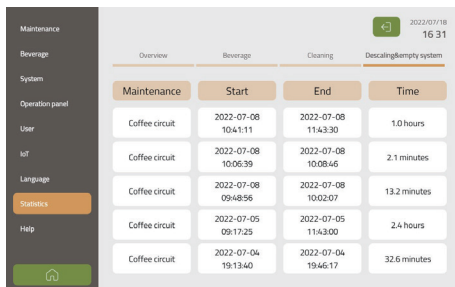


Maintenance	Start	End	Time
Coffee circuit	2022-07-08 10:41:11	2022-07-08 11:43:30	1.0 hours
Coffee circuit	2022-07-08 10:06:39	2022-07-08 10:08:46	2.1 minutes
Coffee circuit	2022-07-08 09:48:56	2022-07-08 10:02:07	13.2 minutes
Coffee circuit	2022-07-05 09:17:25	2022-07-05 11:43:00	2.4 hours
Coffee circuit	2022-07-04 19:13:40	2022-07-04 19:46:17	32.6 minutes

History records of descaling and emptying water system can be viewed here.

6.10 Help

About

View Machine Information

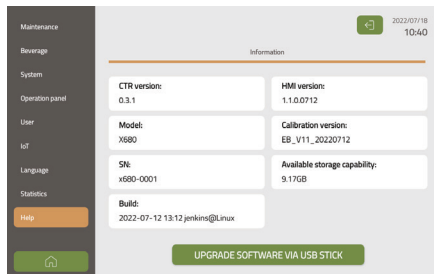

CTR version: 0.3.1	HMI version: 1.1.0.0712
Model: X680	Calibration version: EB_V11_20220712
SN: x680-0001	Available storage capability: 9.17GB
Build: 2022-07-12 13:12 jenkins@Linux	

UPGRADE SOFTWARE VIA USB STICK

Information regarding this machine could be viewed here including,

- Ctr version (PCB software)
- HMI version (Screen software)
- Android system version
- Calibration file version
- Serial number of machine
- IMEI information of machine
- Available storage space of screen

Upgrade software via USB stick

Program of machine can be upgraded by USB stick



Software program upgrade needs to be instructed by professional technician, contact customer service personnel for help

6.11 IOT function

IOT function applies to machines of X series Wifi and 4G internet connection are available .Specific using methods need to connect service personnel for help

7. Cleaning and maintenance

The perfect coffee experience depends on a perfectly cleaned coffee machine. Clean your coffee machine at least once a day and more frequently if necessary. Clean the machine immediately if you find that it is dirty or clogged

7.1 Cleaning intervals overview


Cleaning intervals	Operation	Type
Daily (or needed)	Brew unit rinsing	automatic or manual
	Milk frother rinsing	automatic or manual
	Mixer rinsing	automatic or manual
	Brew unit full rinsing	automatic or manual
	Empty drip tray	manual
	Empty grounds container	manual
	Clean the screen	manual
	Clean steam wand	manual
Weekly	Clean milk frother	manual
	Clean the brew unit	manual
	Clean the bean hopper	manual
	Clean the powder hopper	manual
	Clean the mixer	manual
If presents	Clean the water tank	manual
	Brew unit cleaning	When the screen shows a message
	Milk system cleaning	When the screen shows a message
	Descaling	When the screen shows a message
	Filter change	When the screen shows a message

7.2 Parts preparation

Parts	Usage
Cleaning tablet	Brew unit cleaning with tablet
Tablet key	Add brew unit cleaning tablet
Milk system cleaning agents	Milk system cleaning
Descaling powder	Descaling
key	Open the front panel, bean hopper and powder hopper
Milk hose brush	Clean milk hose manually
Damp cloth	Clean the hoppers, screen, machine surface ,steam wand

7.3 Daily cleaning

7.3.1 Brew unit rinsing/ Milk frother rinsing/ Mixer rinsing

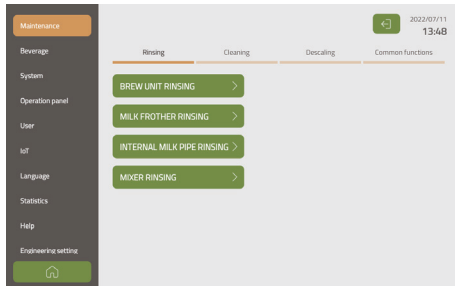

1. Every automatic rinsing intervals could be set in menu / maintenance setting, then rinsing will be processed automatically after reaching the setting condition.



2. Immediately rinse can be selected manually. Enter '**care/rinsing**' menu, and touching each rinsing option can rinse at once.



Hot water will be dispensed from coffee spout during rinsing, be careful to avoid scalding

7.3.2 Empty grounds container


Empty grounds container (at least once per day).



1. Remove grounds container



2. Pour out the coffee grounds

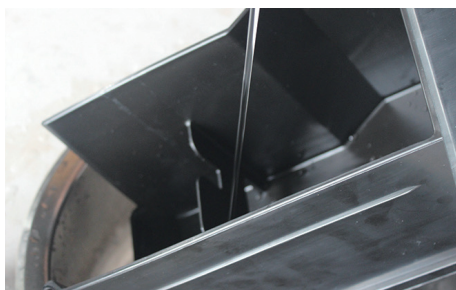


3. Clean it thoroughly with fresh water



4. Dry and place the grounds container back

7.3.3 Empty drip tray

The drip tray is below the coffee grounds container. Clean the drip tray as needed (at least once per day).

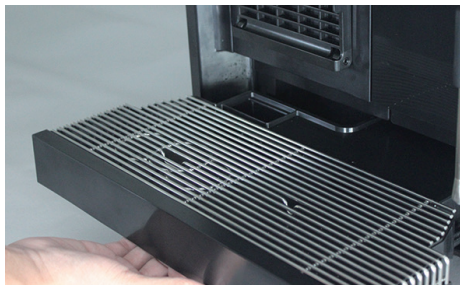

1. Remove the drip tray



2. Pour out waste water



3. Clean it thoroughly with fresh water




4. Dry and place the drip tray back



Must clean the two metal plates in front of the drip tray and keep them dry, otherwise, 'empty drip tray' will be misreported

7.3.4 Clean the screen

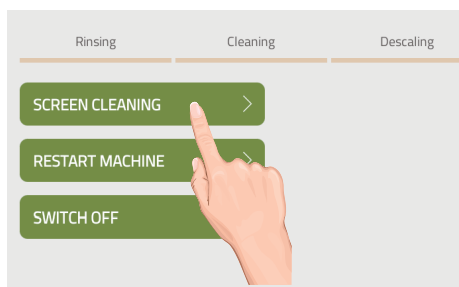

Enter '**maintenance/common functions**'. Select '**SCREEN CLEANING**' to start a 15- second countdown.

Now screen can be wiped by a dry cloth.

7.3.5 Clean Steam wand (optional)



Use damp cloth to wipe steam wand after each use



Touch '**steam**' to release some steam is helpful for cleaning nozzle.


7.4 Weekly cleaning

7.4.1 Cleaning milk frother manually


1. Switch off the machine and open the operation panel.



2. Press the buckle and pull up the nozzle of milk frother

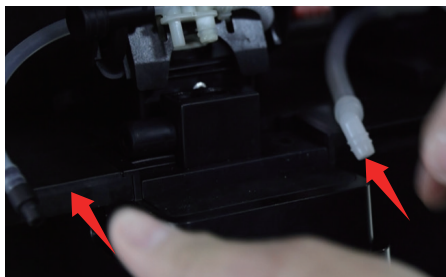

3. Disconnect the pipe connection

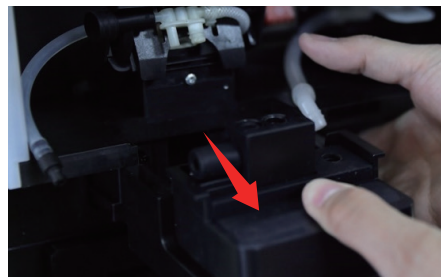

4. Pull out milk frother forward



5. Dismantle milk frother



6. Clean milk frother with fresh water and place it back




Specific process of cleaning milk frother manually can be viewed from [‘Help/video/cleaning milk frother’](#) manually


7.4.2 Cleaning brew unit manually



1. Switch off the coffee machine and disconnect mains plug firstly

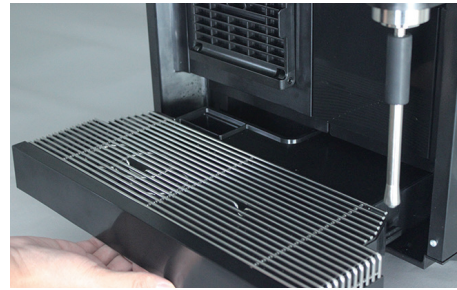

2. Remove grounds container and drip tray. Now Brewing unit is fully accessible

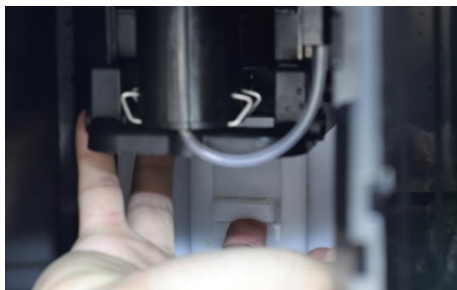

3. With one hand reach into the chute under the brew unit and push the locking up and release it



4. Slowly guide the brewing unit all the way down, tilt and pull forward. Remove the brewing unit and hold firmly



5. Clean the brewing sieve under running water



6. Dry the brewing unit with a cloth. Allow to dry completely before reinstalling in the coffee machine

7.4.3 Clean the bean hopper



Bean hoppers can be cleaned when needed and at regular intervals (recommendation: weekly).

1. Switch off coffee machine firstly and disconnect mains plug.
2. Remove the bean hopper lid;
3. Open the display panel by using the key and lift the panel up;
4. Pull the lock plate in the bean hopper to release the hopper;
5. Remove the bean hopper, empty it out, and clean it with a damp cloth.
6. Dry the bean hopper completely and place it back and lock it.
7. Lock the screen and place it back.



Specific assemble and disassemble process of bean hopper can see [page 16](#) 'empty bean hopper'

7.4.4 Clean the powder hopper



1. Switch off coffee machine firstly and disconnect mains plug.
2. Open display panel by using the key and lift the panel up;
3. Pull the lock plate in the powder hopper to release the hopper.
4. Remove the powder hopper, empty it out, and clean it with a damp cloth.
5. Dry the powder hopper completely and place it back and lock it.
6. Lock the screen and place it back.



Specific assemble and disassemble process of powder hopper can see [page 17](#) 'empty powder hopper'

7.4.5 Clean the mixer

1. Switch off the coffee machine firstly and disconnect mains plug.



2. Open the display panel by using the key and lift the panel up



3. Release the lock plate in the mixer to release the mixer



4. Pull the mixer bowl forward by the handle



5. Pull off the mixer hose running from the mixer bowl to the spout and remove it



6. Clean it with a damp cloth.



7. Dry the mixer completely and install it back and lock it


8. Lock the screen and place it back




Cleaning will be more frequently according to the consumption of powder

7.5 Brew unit cleaning if presents


A message ‘brew unit cleaning with tablet’ will appear on the screen when the coffee system need to be cleaned with a tablet. Total duration is approx. 30 minutes.

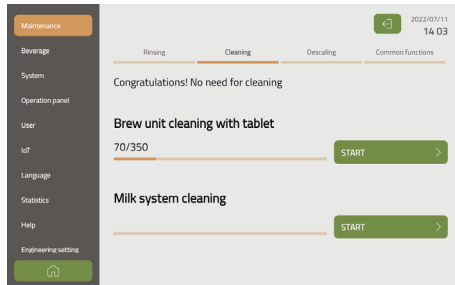

1. Access to “**maintenance/cleaning**” menu

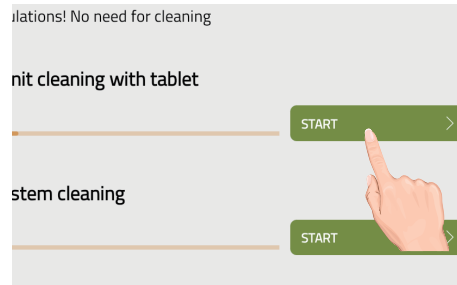

2) Touch ‘**START**’ button

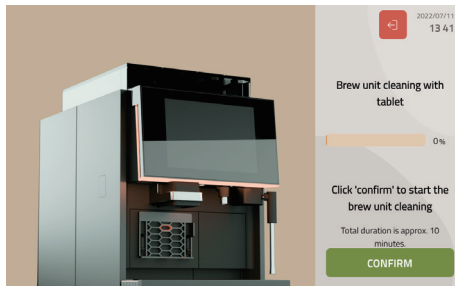

3. Touch '**confirm**' to start the cleaning


4. Perform every step according to the message displayed on the screen




If brew unit cleaning with tablets is not performed in time, the screen will be locked after reaching the preset compulsory cleaning intervals, and the machine cannot continue to use until cleaning process has been completed.

7.6 Milk system cleaning if presents


A message ‘milk system cleaning’ will appear on the screen when the milk system need to be cleaned with cleaning liquid.Total duration is approx. 10 minutes.

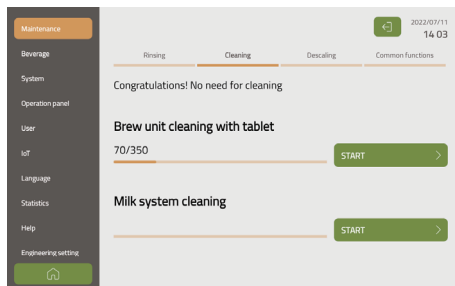

1. Access to “maintenance/cleaning” menu

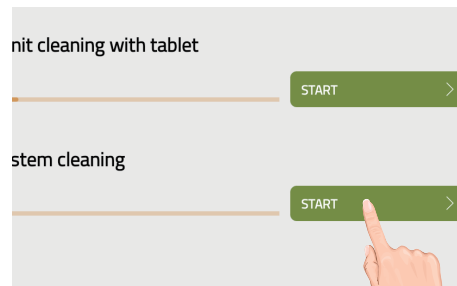

2.Touch ‘START’ button

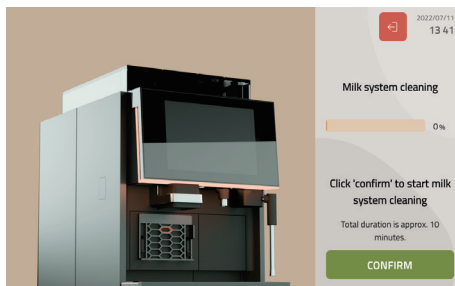

3.Touch 'Confirm' to start the cleaning

4. Perform every step according to the message displayed on the screen.



If milk system cleaning with cleaning agent is not be carried out in time, the screen of machine will be locked after reaching the preset compulsory cleaning cups, and the machine cannot continue to use until cleaning process has been completed.



During cleaning and descaling, hot cleaning solution or descaling solution flows out of the spout. So never reach under the spouts while descaling.


7.7 Descaling if presents

The water hardness, water flow, and whether a water filter is used determine the schedule for descaling. This point in time is calculated by the X4 series and displayed.


7.7.1 Coffee circuit descaling



If descaling is not be carried out in time, the screen of machine will be locked after reaching the preset compulsory descaling, and the machine cannot continue to use until descaling process has been completed.

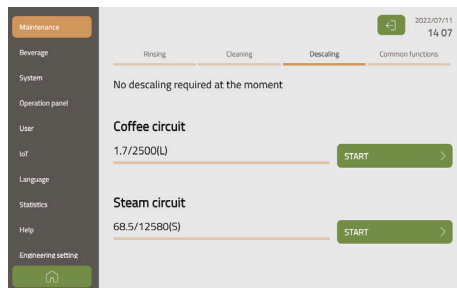

1. Access to “**maintenance/descaling**” menu

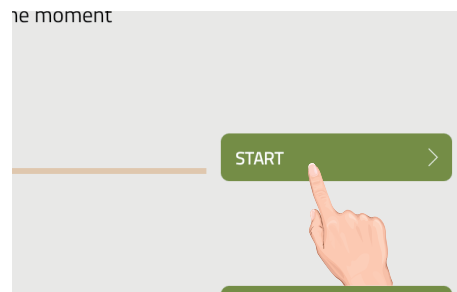

2. Touch ‘**START**’ button

3. Touch '**Confirm**' to start the descaling



4. Perform every step according to the message displayed on the screen.



During cleaning and descaling, hot cleaning solution or descaling solution flows out of the spout. So never reach under the spouts while descaling.

7.7.2 Steam circuit (steam system) descaling




A message ‘**Steam circuit descaling**’ will appear on the screen when the steam system need to be descaled with descaling powder.

Steps of starting-up steam way are similar with steps of descaling coffee water way. Please operate strictly according to messages displayed on the screen.

8. Messages and explanation

8.1 Operational messages

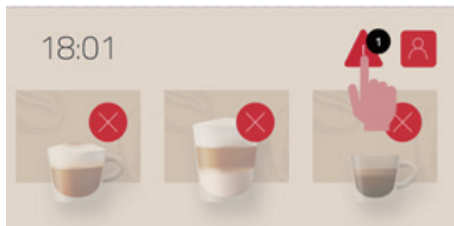

When an error occurs, the machine displays an error message, which is indicated by a red triangle in the upper-right corner of the operator panel. Tap this symbol to obtain more information.

Information	Possible solutions
Place water tank	Check whether the water tank is installed correctly or place it back
Place screen back	Place screen back
Place drip tray	Place drip tray back
Place grounds container	Place grounds container back
Place left bean hopper	Place left bean hopper back
Place right bean hopper	Place right bean hopper back
Place powder hopper	Place powder hopper back

Information	Possible solutions
Low water level of water tank	Fill water tank with fresh water
Empty drip tray	Pour out the water in the drip tray,if drip tray has been emptied but message is still remaining Clean and dry the two metal water level sensors in front of the drip tray
Fill left bean hopper	Fill left bean hopper with coffee beans
Fill right bean hopper	Fill right bean hopper with coffee beans
Fill powder hopper	Fill powder hopper with powder
Use lower temperature milk	Use milk between 2-10°C
Use higher temperature milk	Use milk between 2-10°C
Please install brew unit	Place brew unit back

8.2 Error message

The error message will appear automatically when the entire system is affected by an error. Restart machine if serious problems appeared.

1. Switch off the machine by main switch when restart the machine
2. Please contact service technician if the machine cannot be started or if you are unable

Error code	Error description	Possible solutions
E1	Main PCB error	1. Try to restart the machine 2. If error message is still remaining after restart, please switch off the machine and contact customer service
E2	Boiler temperature too high	
E3	Thermoblock temperature too high	
E4	Boiler temperature too low	
E5	Thermoblock temperature too low	
E6	Boiler heating too fast	
47	Thermoblock heating too fast	

Error code	Error description	Possible solutions
E8	Boiler heating too slow	1. Try to restart the machine 2. If error message is still remaining after restart, please switch off the machine and contact customer service
E9	Thermoblock heating too slow	
E10	Boiler heating error	
E11	Thermoblock heating error	
E12	Water tank detected error	
E13	Water mixing valve error	
400	Coffee circuit error	
E401	Steam circuit error	
E402	Brew unit error	

Error code	Error description	Possible solutions
E403	Coffee multi-way valve error	1. Try to restart the machine 2. If error message is still remaining after restart, please switch off the machine and contact customer service
E404	Steam multi-way valve error	
E405	Mixer error	
E406	Left powder motor error	

9. Decommissioning

9.1 Preparing for decommissioning

1. Clean the machine by using all cleaning and rinsing function.
2. Cleaning after empty bean hopper and powder hopper.
3. Clean beverage spout and milk pipe manually.
4. Clean brew unit manually.
5. Clean mixer manually.
6. Clean drip tray and grounds container etc.

9.2 Short-term decommissioning (within one month)

1. Empty Coffee circuit (Have your coffee machine drained by your service technician).
2. Disconnect the machine from the power supply.
3. Shutting off the water supply.
4. Switch off the add-on units and disconnect them from the power supply.

9.3 Long-term decommissioning (over one month)

Some components may no longer function as they should if they have been stored or unused for long periods

Coffee machine must be maintained, installed, and cleaned before preparing any drinks.

1. Have your coffee machine drained by your service technician.
2. Remedial maintenance may be required when commissioning the machine again if it has been stored in excess of 6 month. Please contact service personnel for support.

10. Transport and storage

10.1 Transport

Protect the machine from mechanical damage and adverse environmental conditions during transport and storage.

1. Protect the machine from falling or tipping over.
2. Restore external packaging of machine well to use in transportation.
3. In order to avoid the damage to machine, water in the coffee machine must be emptied before transportation.
4. After the completion of emptying waterway, dry the machine, inside and out.



Empty water circuit must be performed by professional technician, please contact service personnel for support.



If the program of emptying waterway is performed, coffee system needs to re-perform the program that has been carried out in the first time use when using the machine again .

10.2 Storage

Storage conditions must be fulfilled:

1. Permissible temperatures: -10 to +50°C
2. If the machine has not been drained and emptied completely, it must not be stored at sub-zero temperatures
3. Set the machine up in a standing position
4. Machine system emptied
5. Machine and accessories packaged, preferably in their original packaging.

10.3 Recommissioning after prolonged periods of storage or non-use

Coffee machine may no longer function if they have been stored or unused for periods in excess of 6 months. Contact your service team for information regarding restoring and recommissioning your machine.

11. Disposal

When disposal of coffee machine, some internal spare parts are still worth using again, Pay attention to deal with old parts in an environmentally neutral way.

1. Beans, powder and coffee grounds can be composted.
2. Observe the information on the label when disposing of any unused cleaning agent.
3. Dispose of the fluids from the cleaning container or the drip tray in the wastewater system.



Dispose of electronic parts separately



Dispose of plastic parts in accordance with their marking